

Eclipse® Model 706 High Performance Guided Wave Radar Level Transmitter

DESCRIPTION

The new Eclipse® Model 706 High Performance Transmitter is a loop-powered, 24 VDC level transmitter that is based upon the proven and accepted technology of Guided Wave Radar (GWR). Encompassing a number of significant engineering accomplishments, this leading edge level transmitter is designed to provide measurement performance well beyond that of many of the more traditional technologies.


Utilizing "diode switching" technology, along with the most comprehensive probe offering on the market, this single transmitter can be used in a wide variety of applications ranging from very light hydrocarbons to waterbased media.

The innovative angled, dual compartment enclosure is now a common sight in the industry. This enclosure, first brought to the industry by Magnetrol® in 1998, is angled to maximize ease of wiring, configuration, and viewing of the versatile graphic LCD display.

One universal Model 706 transmitter can be used and interchanged with all probe types, and offers enhanced reliability as it is suitable for use in critical SIL 2 hardware safety loops.

The ECLIPSE Model 706 supports both the FDT/DTM and Enhanced DD (EDDL) standards, which allow viewing of valuable configuration and diagnostic information such as the echo curve in tools such as PACT*ware*™, AMS Device Manager, and various HART® Field Communicators.





Eclipse® Model 706 DTM

Measures Level, Interface, Volume and Flow



APPLICATIONS

MEDIA: Liquids, solids, or slurries; hydrocarbons to waterbased media (Dielectric Constant $\mathbf{E}_{\rm r}$ = 1.2–100)

VESSELS: Most process or storage vessels up to rated probe temperature and pressure.

CONDITIONS: All level measurement and control applications including process conditions exhibiting visible vapors, foam, surface agitation, bubbling or boiling, high fill/empty rates, low level and varying dielectric media or specific gravity.

FEATURES

- Multivariable, two-wire, 24 VDC loop-powered transmitter for level, interface, volume, or flow.
- Diode switching technology offers best-in-class signal strength and signal-to-noise ratio (SNR) resulting in enhanced capability in difficult low dielectric applications.
- Level measurement not affected by changing media characteristics.
- No need to move levels for calibration.
- Overfill Capable probes allow for "true level" measurement all the way up to the process seal, without the need for special algorithms.
- 4-button keypad and graphic LCD display allow for convenient viewing of configuration parameters and echo curve.
- Proactive diagnostics advise not only what is wrong, but also offer troubleshooting tips.
- Nine common tank shapes for volumetric output.

- 30-point custom strapping table for uncommonlyshaped tanks.
- Two standard flumes and four standard weirs of various sizes for flow measurement.
- Generic flow equation for non-standard channels.
- 360° rotatable housing can be separated from probe without depressurizing the vessel.
- Probe designs up to +850° F/6250 psi (+450° C/431 bar).
- Saturated steam applications up to 2250 psi @ +650° F (155 bar @ +345° C).
- Cryogenic applications down to -320° F (-196° C).
- Transmitter can be remote-mounted up to 12 feet (3.6 m) away from the probe.
- FMEDA evaluation allows use in SIL 2 Loops (full FMEDA report available).
- · No moving parts.


TECHNOLOGY


PRINCIPLE OF OPERATION

ECLIPSE Guided Wave Radar is based upon the technology of TDR (Time Domain Reflectometry). TDR utilizes pulses of electromagnetic energy transmitted down a wave guide (probe). When a pulse reaches a surface that has a higher dielectric constant than the air ($\mathbf{E}_r = 1$) in which it is traveling, a portion of the pulse is reflected. The transit time of the pulse is then measured via high speed timing circuitry that provides an accurate measure of the liquid (or solids) level. The amplitude of the reflection depends on the dielectric constant of the product. The higher the dielectric constant, the larger is the reflection.

INTERFACE MEASUREMENT

The ECLIPSE Model 706 is capable of measuring both an upper liquid level and an interface liquid level. As only a portion of the pulse is reflected from a low dielectric upper surface, some of the transmitted energy continues down the GWR probe through the upper liquid. The remaining initial pulse is again reflected when it reaches the higher dielectric lower liquid. It is required that the upper liquid has a dielectric constant less than 10, and the lower liquid has a dielectric constant greater than 15. A typical interface application would be oil over water, with the upper layer of oil being non-conductive ($\mathbf{E_r} \approx 2.0$), and the lower layer of water being very conductive ($\mathbf{E_r} \approx 80$). The thickness of the upper layer could be as small as 2" (50 mm) while the maximum upper layer is limited to the length of the GWR probe.

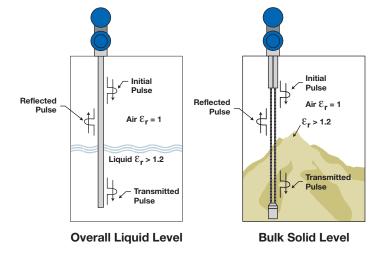

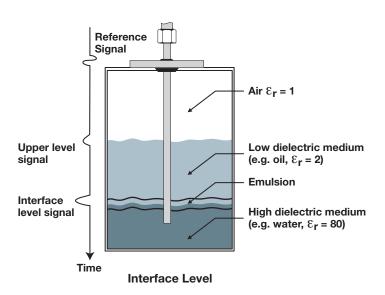

EMULSION LAYERS

As emulsion layers, also called "rag layers," can decrease the strength of the reflected signal in an interface application, GWR transmitters are typically recommended for applications that have clean, distinct layers.

However, the ECLIPSE Model 706, with its powerful internal measurement algorithms, will tend to detect the top of an emulsion layer. Contact the factory for application assistance regarding emulsion layers in your specific application.

SATURATED STEAM APPLICATIONS (Boilers, Feedwater Heaters, etc.)

As the temperature of a saturated steam application increases, the dielectric constant of the steam vapor space also increases. This increase in vapor space dielectric causes a delay in the GWR signal propagation as it travels down the probe, causing the liquid level to appear lower than actual.

NOTE: The measurement error associated with this propagation delay does depend on temperature and is a function of the square root of the vapor space dielectric constant. For example, with no compensation, a +450° F (+230° C) application would show a level error of about 5.5%, while a +600° F (+315° C) application would show an error approaching 20%!

The ECLIPSE Model 706 transmitter and Model 7y8 Coaxial Steam probe provide a unique solution to this application. The effects of the changing steam conditions can be compensated for by utilizing a mechanical steam target placed inside and near the top of the Model 7y8 coaxial probe.

Knowing exactly where the target is located at room temperature, and then continuously monitoring its apparent location, the vapor space dielectric can be back-calculated. Knowing the vapor space dielectric, accurate compensation of the actual liquid level reading is accomplished.

This is a patented technique with two US Patents (US 6642801 and US 6867729) issued for both the mechanical target concept and the associated software algorithm.

Contact the factory for additional information relating to saturated steam applications.

OVERFILL CAPABILITY

Although agencies like WHG or VLAREM certify **Overfill proof** protection, defined as the tested, reliable operation when the transmitter is used as overfill alarm, it is assumed in their analysis that the installation is designed in such a way that the vessel or side mounted cage cannot physically overfill.

However, there are practical applications where a GWR probe can be completely flooded with level all the way up to the process connection (face of the flange). Although the affected areas are application dependent, typical GWR probes have a transition zone (or possibly dead zone) at the top of the probe where interacting signals can either affect the linearity of the measurement or, more dramatically, result in a complete loss of signal.

While some manufacturers of GWR transmitters may use special algorithms to "infer" level measurement when this undesirable signal interaction occurs and the actual level signal is lost, the ECLIPSE Model 706 offers a unique solution by utilizing a concept called **Overfill Safe Operation**.

An **Overfill safe probe** is defined by the fact that it has a predictable and uniform characteristic impedance all the way down the entire length of the waveguide (probe). These probes allow the ECLIPSE Model 706 to measure accurate levels up to the process flange without any non-measurable zone at the top of the GWR probe.

Overfill safe GWR probes are unique to ECLIPSE GWR, and coaxial probes can be installed at any location on the vessel. Overfill safe probes are offered in a variety of Coaxial and Caged designs.

THREE STYLES OF GWR PROBES

With one basic ECLIPSE Model 706 transmitter that operates with all probes, choosing the proper Guided Wave Radar (GWR) probe is the most important decision in the application process. The probe configuration establishes fundamental performance characteristics.

All ECLIPSE Model 706 probes can be described by three basic configurations:

- Coaxial
- Twin flexible cable
- Single element (rigid rod or flexible cable)

Each of these probe configurations has specific strengths and weaknesses. Although there can be overlap, and different probes can certainly be used in similar applications, it is important to understand their basic differences so that one can choose the probe type that will offer optimal performance.

The descriptions below are facts relating to the physics of GWR technology and are not specific to the ECLIPSE Model 706.


COAXIAL PROBES

The coaxial probe is the most efficient of all GWR probe configurations and should be the first consideration in all applications. Analogous to the efficiency of coaxial cable, a coaxial probe allows almost unimpeded movement of the high frequency pulses throughout its length.

The electromagnetic field that develops between the inner rod and outer tube is completely contained and uniform down the entire length of the probe. See Figure 1. This means that the coaxial probe is immune to any proximity affects from other objects in the vessel, and therefore, in essence, it can be used anywhere that it can mechanically fit.

The efficiency and overall sensitivity of a coaxial configuration yields robust signal strength, even in extremely low dielectric ($\varepsilon_{\rm r} \ge 1.4$) applications. The sensitivity of this "closed" design, however, also makes it more susceptible to measurement error in applications that can have coating and buildup.

All ECLIPSE Model 706 coaxial probes are Overfill Safe as standard, by design.

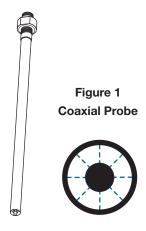

BASIC-FOR CLEAN LIQUIDS

The basic 0.875" (22.5 mm) diameter coaxial GWR probe is only recommended for use in clean applications or special applications such as saturated steam. Teflon®, PEEK, or alumina spacers centering the inner rod within the outer tube are located at 24" (60 cm) intervals, resulting in a perfect characteristic impedance along the entire length of the probe.

This probe is recommended in applications with viscosities up to 500 cP (mPa.s) maximum.

ENLARGED-FOR DIFFICULT LIQUIDS

The standard Enlarged 1.75" (45 mm) or 1.93" (49mm) diameter coaxial GWR probes can be generally used for most applications. They can be installed directly into the tank as well as into bypass cages, stillwells or bridles.

The robust construction reduces the number of spacers required, allowing the probe to be used in applications where higher risk of buildup exists. To further reduce the possibility of media buildup, the use of a single bottom spacer is recommended up to probe lengths of 100 inches (2.54 meters). The overall sensitivity and performance of an enlarged coaxial GWR probe is identical to a standard coaxial GWR probe, but it offers the very important advantage that it can be used in applications with viscosities up to 2,000 cP (mPa.s).

THREE STYLES OF GWR PROBES

OPTIONAL FLUSHING CONNECTION

The maintenance of coaxial GWR probes in applications suffering from buildup or crystallization can be significantly improved by using an optional flushing connection. This flushing connection is a metal extension with a port welded above the process connection. The port allows the user to purge the inside of the coaxial GWR probe during routine maintenance.

Note: The best approach to eliminate the effects of condensation or crystallization is to install adequate insulation or heat tracing (steam or electrical). A flushing connection is no substitute for proper maintenance, but will help to reduce the frequency of the intervention.



CAGED-FOR DIRTY LIQUIDS


Unique to MAGNETROL, the Caged GWR probe is a single rod probe which uses an existing or new cage, bridle, or stillwell as the second conductor to re-create the same signal propagation of a coaxial GWR probe. Caged GWR probes are designed for 2" (DN50), 3" (DN80) or 4" (DN100) diameter metal chambers, and utilize a specially designed impedance matching section that results in the same overall characteristic impedance of a coaxial style GWR probe.

Caged GWR probes offer the same sensitivity and performance as coaxial GWR probes, but the single conductor design allows it to be used in applications with viscosities up to 10,000 cP (mPa.s).

OPTIONAL ANNUNCIATOR FITTING

High Pressure and High Temperature High Pressure ECLIPSE Model 706 probes containing a glass ceramic alloy process seal (Models 7yD, P, J, L, M and N) are available with an optional annunciator fitting. The use of this fitting complies with the Dual Seal requirements of

ANSI/ISA-12.27.01-2011, titled "Requirements for Process Sealing between Electrical Systems and Flammable or Combustible Process Fluids," which require the incorporation of a method that indicates or annunciates a primary seal failure (e.g., visible leakage, an audible whistle, or other means of monitoring).

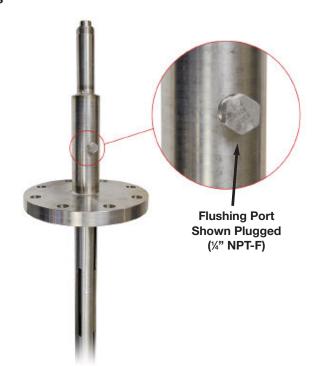


THREE STYLES OF GWR PROBES

TWIN CABLE FLEXIBLE PROBES

The relationship of the Twin Cable probe design to a coaxial probe design is similar to that of older, twin-lead, antenna lead-in to modern, coaxial cable. 300-ohm twin-lead cable simply does not have the efficiency of 75-ohm coaxial cable, making the parallel conductor design less sensitive than the concentric coaxial. See Figure 2. This translates into Twin Cable GWR probes having the ability to measure dielectrics down to $\mathcal{E}_r \ge 1.7$.

Heavy bridging of material between the cables across the FEP coating can cause improper measurement and should be avoided.

Figure 2 also shows that, although most of the electromagnetic field develops between the two cables, there is also some peripheral energy that expands outward, making the Twin Cable probe more sensitive to proximity effects of objects located immediately around it. For that reason, it is recommended to keep the active element of the Twin Cable probe at least 1 inch (25 mm) away from metal objects.

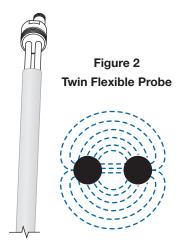

SINGLE ROD PROBES

Single element GWR probes act quite differently than both coaxial and twin cable designs. With only one conductor to work with, the pulses of energy develop between the single rod probe and the mounting nut or flange. In other words, the pulse propagates down and around the rod as it references its ground at the top of the tank.

The energy and efficiency of the pulse are directly related to how much metallic surface exists around it at the top of the vessel. This metallic surface at the top of the probe is called the "launch plate." The larger the launch plate, the more efficient the signal propagation down the probe.

Figure 3 shows the single element design and how the electromagnetic pulse effectively expands into a teardrop shape as it propagates away from the top of the tank (the inherent ground reference). This single element configuration (rod or cable) is the least efficient of the three probe types, but can still operate with a with minimum dielectric detection of approximately $\mathbf{\epsilon}_{\rm r} > 1.7$ in an open, non-metallic vessel.


However, this dielectric constant performance improves considerably ($\mathcal{E}_{\rm r} > 1.4$) when the single rod probe is installed in a metal cage/bridle, or mounted 2–6" (50–150 mm) away from a metal tank wall. Because the design is "open," it exhibits two strong tendencies:

- It is the most forgiving of coating and buildup. (The PFA-insulated probe is the best choice for severe buildup and coating).
- It is most affected by proximity issues.

It is important to note that a parallel metal wall INCREASES the performance of a single rod probe while a singular, metal object protruding out near the probe may be improperly detected as a liquid level.

These tendencies are application/installation dependent. Therefore, by properly matching the single rod probe to a cage/chamber, the ECLIPSE Model 706 broad offering of caged probes combines the performance/sensitivity advantages of a coaxial probe and the viscosity immunity of a single rod probe. The Caged Probes are Overfill Safe by design, can be used in interface and other difficult, low dielectric applications, and are unique to MAGNETROL and the ECLIPSE Model 706.

Contact the factory for additional support and questions.

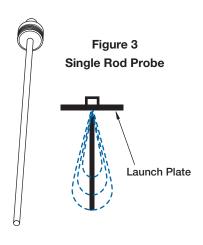

COAXIAL/CAGED GWR PROBE TWIN CABLE GWR PROBE SINGLE ROD/CABLE PROBE signal propagation end view end view

GWR Probe①	Description	Application	Installation	Dielectric Range 23	Temperature Range ④	Max. Pressure	Vacuum ⑤	Overfill Safe	Viscosity cP (mPa.s)
	Coaxial GWR Probes—Liquids								
7yT	Standard Temperature	Level/Interface	Tank/Chamber	ε _r 1.4–100	-40° to +400° F (-40° to +200° C)	1000 psi (70 bar)	Yes	Yes	500/2000
7yP	High Pressure	Level/Interface	Tank/Chamber	ε _r 1.4–100	-320° to +400° F (-196° to +200° C)	6250 psi (431 bar)	Full	Yes	500/2000
7yD	High Temp./ High Press.	Level/Interface	Tank/Chamber	ε _r 1.4–100	-320° to +850° F (-196° to +450° C)	6250 psi (431 bar)	Full	Yes	500/2000
7yS	Steam Probe	Saturated Steam	Tank/Chamber	ε _r 10–100	-40° to +575° F (-40° to +300° C)	1275 psi (88 bar)	Full	No ®	500
			Cage	d GWR Pro	bes—Liquids				
7yG	Standard Temperature	Level/Interface	Chamber	ε _r 1.4–100	-40° to +400° F (-40° to +200° C)	1000 psi (70 bar)	Yes	Yes	10000
7yL	High Pressure	Level/Interface	Chamber	ε _r 1.4–100	-320° to +400° F (-196° to +200° C)		Full	Yes	10000
7yJ	High Temp./ High Press.	Level/Interface	Chamber	ε _r 1.4–100	-320° to +850° F (-196° to +450° C)	6250 psi (431 bar)	Full	Yes	10000
			Single Rod	Rigid GW	R Probes—Liqui	ds			
7yF	Standard Temperature	Level	Tank	ε _r 1.7–100	-40° to +400° F (-40° to +200° C)	1000 psi (70 bar)	Yes	No ⑦	10000
7yM	High Pressure	Level	Tank	ε _r 1.7–100	-320° to +400° F (-196° to +200° C)	6250 psi (431 bar)	Full	No ⑦	10000
7yN	High Temp./ High Press.	Level	Tank	ε _r 1.7–100	-320° to +850° F (-196° to +450° C)	6250 psi (431 bar)	Full	No ⑦	10000
			Single Cable	Flexible G	WR Probes—Lic	uids			
7y1	Standard Temperature	Level	Tank	ε _r 1.7–100	-40° to +400° F (-40° to +200° C)	1000 psi (70 bar)	Yes	No ⑦	10000
7y3®	High Temp./ High Press.	Level	Tank	ε _r 1.7–100	-320° to +850° F (-196° to +450° C)	6250 psi (431 bar)	Full	No ⑦	10000
7y4®	Standard Temperature	Level/Interface	Chamber	ε _r 1.4–100	-40° to +400° F (-40° to +200° C)	1000 psi (70 bar)	Yes	No ⑦	10000
7y6®	High Temp./ High Press	Level/Interface	Chamber	ε _r 1.4–100	-320° to +850° F (-196° to +450° C)	6250 psi (431 bar)	Full	No ⑦	10000
			Twin Cable I	Flexible GV	VR Probes—Liq	uids			
7y7	Standard Temperature	Level/Interface	Tank	ε _r 1.7–100	-40° to +400° F (-40° to +200° C)	1000 psi (70 bar)	Yes	No ⑦	1500
			Single Cable	Flexible G	iWR Probes—Sc	olids			
7y2	Bulk Solids Probe	Level	Tank	ε _r 4–100	-40° to +150° F (-40° to +65° C)	Atmos.	No	No®	10000
			Twin Cable	Flexible G	WR Probes—So	lids			
7y5	Bulk Solids Probe	Level	Tank	ε _r 1.7–100	-40° to +150° F (-40° to +65° C)	Atmos.	No	No®	1500

① 2nd digit A=English, C=Metric

② Minimum \mathcal{E}_r 1.2 with end of probe analysis enabled.

 $[\]odot$ Single rod probes mounted directly into the vessel must be within 3–6 inches of metal tank wall to obtain minimum dielectric of 1.4, otherwise ε_r min = 1.7.

 $[\]ensuremath{\mathfrak{G}}$ Depends on the probe spacer material. Refer to Model Selection for spacer options.

[©] ECLIPSE probes containing o-rings can be used for vacuum (negative pressure) service, but only those probes with glass seals are hermetically sealed to <10⁻⁸ cc/sec @ 1 atmosphere helium.

[©] Consult factory for overfill applications

① Overfill capability can be achieved with software.

[®] Scheduled for future release.

TRANSMITTER SPECIFICATIONS

FUNCTIONAL/PHYSICAL

System Design				
Measurement Principle		Guided Wave Radar based on Time Domain Reflectometry (TDR)		
Input				
Measured Variable		Level, as determined by GWR time of flight		
Span		6 inches to 100 feet (15 cm to 30 m); Model 7yS Probe 20 feet (610 cm) max.		
Output				
Туре		4 to 20 mA with HART: 3.8 mA to 20.5 mA useable (per NAMUR NE43)		
		FOUNDATION fieldbus™: H1 (ITK Ver. 6.0.1)		
Resolution	Analog:	.003 mA		
	Digital Display:	1 mm		
Loop Resistance		634 ohms @ 24 VDC and 22 mA		
Diagnostic Alarm		Selectable: 3.6 mA, 22 mA (meets requirements of NAMUR NE 43), or HOLD last output		
Diagnostic Indication		Meets requirements of NAMUR NE107		
Damping		Adjustable 0–10 seconds		
User Interface				
Keypad		4-button menu-driven data entry		
Display		Graphic liquid crystal display		
Digital Communication/Sys	stems	HART Version 7—with Field Communicator, FOUNDATION fieldbus™, AMS, or FDT		
		DTM (PACTware™), EDDL		
Menu Languages		Transmitter LCD: English, French, German, Spanish, Russian		
		HART DD: English, French, German, Spanish, Russian, Chinese, Portuguese		
		FOUNDATION fieldbus Host System: English		
Power (at transmitter terminals)		HART: General Purpose (Weather proof)/Intrinsically Safe/Explosion-proof:		
		16 to 36 VDC		
		11 VDC minimum under certain conditions (refer to I&O Manual 57-606)		
		FOUNDATION fieldbus™: FISCO 9 to 17.5 VDC		
		FNICO, Explosion Proof, General Purpose (Weather proof)		
		9 to 32 VDC		
Housing				
Material		IP67/die-cast aluminum A413 (<0.6% copper); optional 316 stainless steel		
Net/Gross Weight	Aluminum:	4.5 lbs. (2.0 kg)		
316	Stainless Steel:	10.0 lbs. (4.50 kg)		
Overall Dimensions		H 8.34" (212 mm) x W 4.03" (102 mm) x D 7.56" (192 mm)		
Cable Entry		½" NPT or M20		
SIL 2 Hardware (Safety Inte	egrity Level)	Safe Failure Fraction = 93% (HART only)		
		Functional Safety to SIL 2 as 1001 in accordance with IEC 61508		
		(Full FMEDA report available upon request)		

TRANSMITTER SPECIFICATIONS CONTINUED

FUNCTIONAL/PHYSICAL

Environment			
Operating Temperature	-40° to +175° F (-40° to +80° C); LCD viewable -5° to +160° F (-20° to +70° C)		
Storage Temperature	-50° to +185° F (-45° to +85° C)		
Humidity	0 to 99%, non-condensing		
Electromagnetic Compatibility	Meets CE requirement (EN 61326) and NAMUR NE 21		
	NOTE: Single Rod and Twin Cable probes must be used in metallic vessel		
	or stillwell to maintain CE noise immunity		
Surge Protection	Meets CE EN 61326 (1000V)		
Shock/Vibration	ANSI/ISA-S71.03 Class SA1 (Shock); ANSI/ISA-S71.03 Class VC2 (Vibration)		
Performance			
Reference Conditions ①	Reflection from liquid, with dielectric constant in center of selected range,		
	with a 72" (1.8 m) coaxial probe at +70° F (+20° C), in Auto Threshold Mode		
Linearity ② Coaxial/Caged Probes:	<0.1% of probe length or 0.1 inch (2.5 mm), whichever is greater		
Single Rod in Tanks/Twin Cable:	<0.3% of probe length or 0.3 inch (7.5 mm), whichever is greater		
Accuracy Coaxial/Caged Probes:	±0.1% of probe length or ±0.1 inch (2.5 mm), whichever is greater		
Single Rod in Tanks/Twin Cable:	$\pm 0.5\%$ of probe length or ± 0.5 inch (13 mm), whichever is greater		
Interface Operation:	Coaxial/Caged probes: ±1 inch (25 mm) for an interface thickness greater than		
	2 inches (50 mm)		
	Twin Flexible probes: ±2 inch (50 mm) for an interface thickness greater than		
	8 inches (200 mm)		
Resolution	±0.1 inch or 1 mm		
Repeatability	<0.1 inch (2.5 mm)		
Hysteresis	<0.1 inch (2.5 mm)		
Response Time	Approximately 1 second		
Initialization Time	Less than 10 seconds		
Ambient Temperature Effect	Approx. ±0.02% of probe length/degree C (for probes greater than 8 feet (2.5 m))		
Process Dielectric ®	<0.3 inch (7.5 mm) within selected range		
Foundation fieldbus™			
ITK Version	6.0.1		
H1 Device Class	Link Master (LAS)—selectable ON/OFF		
H1 Profile Class	31PS, 32L		
Function Blocks	(8) Al, (3) Transducer, (1) Resource, (1) Arithmetic, (1) Input Selector,		
	(1) Signal Characterizer, (2) PID, (1) Integrator		
Quiescent Current	15 mA		
Execution Time	15 ms (40 ms PID Block)		

Specifications will degrade in Fixed Threshold mode.
 Linearity in top 18 inches (46 cm) of Twin Cable and Single Rod probes in tanks will be application dependent.

③ Accuracy may degrade when using manual or automatic compensation.

	7уТ	7yP
Description	Standard Temperature	High Pressure
Application	Level/Interface	Level/Interface
Installation	Tank/Chamber	Tank/Chamber
Overfill Safe	Yes	Yes
Materials—Probe	316/316L (1.4401/1.4404) Hastelloy® C (2.4819) Monel® (2.4360)	316/316L (1.4401/1.4404) Hastelloy® C (2.4819) Monel® (2.4360)
Process Seal	Teflon® TFE with Viton® o-rings ①	Hermetic Glass Ceramic
Spacers	Teflon® TFE	Teflon® TFE
Probe Outside Diameter Enlarged Basic	316 SS: 1.75" (45 mm) Hastelloy: 1.90" (49 mm) Monel: 1.90" (49 mm) 0.87" (22.5 mm)	316 SS: 1.75" (45 mm) Hastelloy: 1.90" (49 mm) Monel: 1.90" (49 mm) 0.87" (22.5 mm)
Process Connection Threaded Flanged	Enlarged 2" NPT (¾" NPT or 1" BSP) Various ANSI, EN1092, and proprietary flanges	Enlarged 2" NPT (¾" NPT or 1" BSP) Various ANSI, EN1092, and proprietary flanges
Available Probe Length Standard Enlarged	12 to 240 inches (30 to 610 cm) 50 feet (15 m) max. segmented	12 to 240 inches (30 to 610 cm) 50 feet (15 m) max. segmented
Transition Zones ② Top Bottom	0 inches (0 mm) $\epsilon_{r} = \text{1.4: 6 inches (150 mm) } \$,$ $\epsilon_{r} = \text{80: 2 inches (50 mm)}$	0 inches (0 mm) $\epsilon_{r} = \text{1.4: 6 inches (150 mm) } \$,$ $\epsilon_{r} = \text{80: 2 inches (50 mm)}$
Process Temperature	-40° to +400° F (-40° to +200° C)	-320° to +400° F (-196° to +200° C)
Max. Process Pressure ③	1000 psi @ +70° F (70 bar @ +20° C)	6250 psi @ +70°F (431 bar @ +20°C)
Dielectric Range	1.4 to 100 ®	1.4 to 100 ®
Vacuum Service 4	Negative Pressure, but no hermetic seal	Full Vacuum
Viscosity Enlarged Basic	2000cP (mPa.s) 500cP (mPa.s)	2000cP (mPa.s) 500cP (mPa.s)
Media Coating	Filming	Filming

 $[\]ensuremath{\textcircled{1}}$ Other o-ring materials available upon request.

② Transition zones (areas with reduced accuracy) are dielectric dependent. It is recommended to set the 0-100% measuring range outside of the transition zones.

³ Refer to chart on page 16.

⑤ Can be reduced to 3" (75 mm) when lower accuracy is acceptable.

^{© 1.2} minimum dielectric when end of probe analysis is enabled.

	7yD	7yS	
Description	High Temp./High Pressure	Steam Probe	
Application	Level/Interface	Saturated Steam	
Installation	Tank/Chamber	Tank/Chamber	
Overfill Safe	Yes	No ®	
Materials—Probe	316/316L (1.4401/1.4404) Hastelloy® C (2.4819) Monel® (2.4360)	316/316L (1.4401/1.4404) Hastelloy® C (2.4819)	
Process Seal	Hermetic Glass Ceramic	Hermetic Glass Ceramic, PEEK HT	
Spacers	PEEK HT/Ceramic	PEEK HT/Ceramic	
Probe Outside Diameter Enlarged Basic	316 SS: 1.75" (45 mm) Hastelloy: 1.92" (49 mm) Monel: 1.92" (49 mm) 0.87" (22.5 mm)	N/A 0.87" (22.5 mm)	
Process Connection	(==:0 ::::::)	(==10 11111)	
Threaded	2" NPT or 2" BSP Various ANSI, EN1092, and proprietary flanges	3/4" NPT or 1" BSP Various ANSI, EN1092, and proprietary flanges	
Available Probe Length Standard Enlarged	12 to 240 inches (30 to 610 cm) 50 feet (15 m) max. segmented	24 to 240 inches (60 to 610 cm) N/A	
Transition Zones ① Top Bottom	0 inches (0 mm) $\epsilon_r = \text{1.4: 6 inches (150 mm)} \circledast, \\ \epsilon_r = \text{80: 2 inches (50 mm)}$	8 inches (200 mm) $\varepsilon_{\rm r} = 80: 2 \text{ inches (50 mm)}$	
Process Temperature	-320° to +850° F (-196° to 450° C)	-58° to +575° F (-50° to +300° C)	
Max. Process Pressure ②	6250 psi @ +70° F (431 bar @ +20°C)	1275 psi @ +575° F (87.9 bar @ +300°C)	
Dielectric Range	1.4 to 100 ®	10 to 100	
Vacuum Service ®	Full Vacuum	Full Vacuum	
Viscosity Enlarged Basic	2000cP (mPa.s) 500cP (mPa.s)	N/A 500cP (mPa.s)	
Media Coating	Filming	Filming	

① Transition zones (areas with reduced accuracy) are dielectric dependent. It is recommended to set the 0-100% measuring range outside of the transition zones.

② Refer to chart on page 16.

[®] ECLIPSE probes containing o-rings can be used for vacuum (negative pressure) service, but only those probes with glass seal are hermetically sealed to <10-8 cc/sec @ 1 atmosphere helium.

⁴ Can be reduced to 3" (75 mm) when lower accuracy is acceptable.

⑤ 1.2 minimum dielectric when end of probe analysis is enabled.

[®] Consult factory for overfill applications.

	7yG	7yL	7yJ
Description	Standard Temperature	High Pressure	High Temp./High Pressure
Application	Level/Interface	Level/Interface	Level/Interface
Installation	Chamber	Chamber	Chamber
Overfill Safe ⑦	Yes	Yes	Yes
Materials—Probe	316/316L (1.4401/1.4404) Hastelloy® C (2.4819) Monel® (2.4360)	316/316L (1.4401/1.4404) Hastelloy® C (2.4819) Monel® (2.4360)	316/316L (1.4401/1.4404) Hastelloy® C (2.4819) Monel® (2.4360)
Process Seal	Teflon® TFE with Viton® o-rings①	Hermetic Glass Ceramic	Hermetic Glass Ceramic
Spacers	PEEK	PEEK	PEEK HT/Celazole
Probe Outside Diameter 2" Chamber 3" Chamber 4" Chamber	.5" (13 mm) to .75" (19 mm) .75" (19 mm) to 1.13" (29 mm) 1.05" (27 mm) to 1.50" (38 mm)	.5" (13 mm) to .75" (19 mm) .75" (19 mm) to 1.13" (29 mm) 1.05" (27 mm) to 1.50" (38 mm)	.5" (13 mm) to .75" (19 mm) .75" (19 mm) to 1.13" (29 mm) 1.05" (27 mm) to 1.50" (38 mm)
Process Connection Flanged	Various ANSI, EN1092, and proprietary flanges	Various ANSI, EN1092, and proprietary flanges	Various ANSI, EN1092, and proprietary flanges
Available Probe Length	12 to 240 inches (30 to 610 cm)	12 to 240 inches (30 to 610 cm)	12 to 240 inches (30 to 610 cm)
Transition Zones ② Top Bottom	0 inches (0 mm) $\epsilon_r = \text{1.4: 6 inches (150 mm)} \ \text{\^s}, \\ \epsilon_r = \text{80: 2 inches (50 mm)}$	0 inches (0 mm) $\epsilon_r = \text{1.4: 6 inches (150 mm)} \ \$,$ $\epsilon_r = \text{80: 2 inches (50 mm)}$	0 inches (0 mm) $\epsilon_r = \text{1.4: 6 inches (150 mm) } \$,$ $\epsilon_r = \text{80: 2 inches (50 mm)}$
Process Temperature	-40° to +400° F (-40° to +200° C)	-320° to +400° F (-196° to +200° C)	-320° to +850° F (-196° to +450° C)
Max. Process Pressure 3	1000 psi @ +70° F (70 bar @ +20° C)	6250 psi @ +70° F (431 bar @ +20° C)	6250 psi @ +70° F (431 bar @ +20° C)
Dielectric Range ⑦	1.4 to 100 ®	1.4 to 100 ®	1.4 to 100 ®
Vacuum Service 4	Vacuum Service Negative Pressure, but no hermetic seal		Full Vacuum
Viscosity	10,000cP (mPa.s)	10,000cP (mPa.s)	10,000cP (mPa.s)
Media Coating	Maximum Error 10% of coated length (% Error is dependent on dielectric and thickness)	Maximum Error 10% of coated length (% Error is dependent on dielectric and thickness)	Maximum Error 10% of coated length (% Error is dependent on dielectric and thickness)

 $[\]ensuremath{\textcircled{1}}$ Other o-ring materials available upon request.

② Transition zones (areas with reduced accuracy) are dielectric dependent. It is recommended to set the 0-100% measuring range outside of the transition zones.

³ Refer to chart on page 16.

ECLIPSE probes containing o-rings can be used for vacuum (negative pressure) service, but only those probes with glass seal are hermetically sealed to <10-8 cc/sec @ 1 atmosphere helium.
</p>

⁽a) S Can be reduced to 3" (75 mm) when lower accuracy is acceptable.

^{© 1.2} minimum dielectric when end of probe analysis is enabled.

When installed in the proper chamber/cage/stilling well.

SINGLE ROD RIGID PROBE MATRIX

	7yF	7yM	7yN
Description	Standard Temperature	High Pressure	High Temp./High Pressure
Application	Level	Level	Level
Installation	Tank	Tank	Tank
Overfill Safe ⑦	No	No	No
Materials—Probe	316/316L (1.4401/1.4404) Hastelloy® C (2.4819) Monel® (2.4360) PFA Insulated 316/316L rod	316/316L (1.4401/1.4404) Hastelloy® C (2.4819) Monel® (2.4360)	316/316L (1.4401/1.4404) Hastelloy® C (2.4819) Monel® (2.4360)
Process Seal	Teflon® TFE with Viton® o-rings①	Hermetic Glass Ceramic	Hermetic Glass Ceramic
Spacers	None	None	PEEK HT/Celazole
Probe Outside Diameter	Bare: 0.38" (10 mm) rod Coated: 0.625" (16 mm) rod	Bare: 0.38" (10 mm) rod	Bare: 0.50" (13 mm) rod
Process Connection Threaded Flanged	1" or 2" (NPT or BSP) Various ANSI, EN1092, and proprietary flanges	1" or 2" (NPT or BSP) Various ANSI, EN1092, and proprietary flanges	2" (NPT or BSP) Various ANSI, EN1092, and proprietary flanges
Available Probe Length	24 to 240 inches (60 to 610 cm)	24 to 240 inches (60 to 610 cm)	24 to 240 inches (60 to 610 cm)
Transition Zones ② Top Bottom	$\begin{array}{c} \text{Application Dependent} \\ \epsilon_r = \text{1.4: 6 inches (150 mm) } \$, \\ \epsilon_r = \text{80: 2 inches (50 mm)} \end{array} \\ \begin{array}{c} \text{Application Dependent} \\ \epsilon_r = \text{1.4: 6 inches (150 mm) } \$, \\ \epsilon_r = \text{80: 2 inches (50 mm)} \end{array}$		Application Dependent $\epsilon_{r} = \text{1.4: 6 inches (150 mm) } \$,$ $\epsilon_{r} = \text{80: 2 inches (50 mm)}$
Process Temperature	-40° to +400° F (-40° to +200° C)	-320° to +400° F (-196° to +200° C)	-320° to +850° F (-196° to +450° C)
Max. Process Pressure ③	1000 psi @ +70° F (70 bar @ +20° C)	6250 psi @ +70° F (431 bar @ +20° C)	6250 psi @ +70° F (431 bar @ +20° C)
Dielectric Range	1.7 to 100 ®	1.7 to 100 ®	1.7 to 100 ⑥
Vacuum Service 4	Negative Pressure, but no hermetic seal	Full Vacuum	Full Vacuum
Viscosity	10,000cP (mPa.s)	10,000cP (mPa.s)	10,000cP (mPa.s)
Media Coating	Maximum Error 10% of coated length (% Error is dependent on dielectric and thickness)	Maximum Error 10% of coated length (% Error is dependent on dielectric and thickness)	Maximum Error 10% of coated length (% Error is dependent on dielectric and thickness)

 $[\]ensuremath{\textcircled{1}}$ Other o-ring materials available upon request.

② Transition zones (areas with reduced accuracy) are dielectric dependent. It is recommended to set the 0-100% measuring range outside of the transition zones.

³ Refer to chart on page 16.

ECLIPSE probes containing o-rings can be used for vacuum (negative pressure) service, but only those probes with glass seal are hermetically sealed to <10⁻⁸ cc/sec @ 1 atmosphere helium.

[©] Can be reduced to 3" (75 mm) when lower accuracy is acceptable.

^{© 1.2} minimum dielectric when end of probe analysis is enabled.

Overfill capability can be achieved with software.

	7y1	7y3 (Future)
Description	Single Flexible Standard Temperature	Single Flexible HTHP
Application	Level	Level
Installation	Tank	Tank
Overfill Safe ®	No	No
Materials—Cable	316 (1.4401)	316 (1.4401)
Process Seal	Teflon® TFE with Viton® o-rings①	Hermetic Glass Ceramic
Probe Outside Diameter	0.19 inches (5 mm)	0.19 inches (5 mm)
Process Connection Threaded Flanged	2" NPT or 2" BSP Various ANSI, EN1092, and proprietary flanges	2" NPT or 2" BSP Various ANSI, EN1092, and proprietary flanges
Available Probe Length	3 to 100 feet (1 to 30 meters)	3 to 100 feet (1 to 30 meters)
Transition Zones ② Top Bottom	18 inches (45 cm) 12 inches (30 cm)	18 inches (45 cm) 12 inches (30 cm)
Process Temperature	-40° to +400° F (-40° to +200° C)	-320° to +850° F (-196° to +450° C)
Max. Process Pressure ③	1000 psi @ +70° F (70 bar @ +20°C)	6250 psi @ +70° F (431 bar @ +20° C)
Dielectric Range ®	1.7 to 100	1.7 to 100
Vacuum Service ④	Negative Pressure, but no hermetic seal	Full Vacuum
Viscosity	10,000 (mPa.s)	10,000 (mPa.s)
Media Coating	Maximum Error 10% of coated length (% Error is dependent on dielectric and thickness)	Maximum Error 10% of coated length (% Error is dependent on dielectric and thickness)

① Other o-ring materials available upon request.

Transition zones (areas with reduced accuracy) are dielectric dependent. It is recommended to set the 0-100% measuring range outside of the transition zones.

³ Refer to chart on page 16.

ECLIPSE probes containing o-rings can be used for vacuum (negative pressure) service, but only those probes with glass seal are hermetically sealed to <10-8 cc/sec @ 1 atmosphere helium.
 1.2 minimum dielectric when end of probe analysis is enabled.

[©] Overfill capability can be achieved with software.

FLEXIBLE PROBES FOR LIQUIDS MATRIX CONTINUED

	7y4 (Future)	7y6 (Future)	7у7
Description	Single Flexible Single Flexible Standard Temperature HTHP		Twin Flexible Standard Temperature
Application	Level	Level	Level/Interface
Installation	Chamber	Chamber	Tank/Chamber
Overfill Safe	No	No	No
Materials—Cable	316 (1.4401)	316 (1.4401)	316 SS (1.4401) Cables with FEP Webbing
Process Seal ①	Teflon® TFE with Viton® o-rings	Hermetic Glass Ceramic	Teflon® TFE with Viton® o-rings
Cable Outside Diameter	0.19 inches (5 mm)	0.19 inches (5 mm)	(2) 0.25 inches (6 mm)
Process Connection Threaded Flanged	2" NPT or 2" BSP Various ANSI, EN, and proprietary flanges 2" NPT or 2" BSP Various ANSI, EN, and proprietary flanges		2" NPT or 2" BSP Various ANSI, EN, and proprietary flanges
Available Probe Length	3 to 100 feet (1 to 30 meters)	3 to 100 feet (1 to 30 meters)	3 to 100 feet (1 to 30 meters)
Transition Zones ② Top Bottom	18 inches (45 cm) 18 inches (45 cm) 12 inches (30 cm) 12 inches (30 cm)		18 inches (45 cm) 12 inches (30 cm)
Process Temperature	-40° to +400° F (-40° to +200° C)	-320° to +850° F (-196° to +450° C)	-40° to +400° F (-40° to +200° C)
Max. Process Pressure 3	1000 psi @ +70° F (70 bar @ +20° C)	6250 psi @ +70° F (431 bar @ +20° C)	1000 psi @ +70° F (70 bar @ +20° C)
Dielectric Range ®	1.7 to 100	1.7 to 100	1.7 to 100
Vacuum Service ④	Negative Pressure, but no hermetic seal	Full Vacuum	Negative Pressure, but no hermetic seal
Viscosity	10,000 (mPa.s)	10,000 (mPa.s)	1500 (mPa.s)
Media Coating	Maximum Error 10% of coated length (% Error is dependent on dielectric and thickness)	Maximum Error 10% of coated length (% Error is dependent on dielectric and thickness)	Maximum Error 10% of coated length (% Error is dependent on dielectric and thickness)

① Other o-ring materials available upon request.

② Transition zones (areas with reduced accuracy) are dielectric dependent. It is recommended to set the 0-100% measuring range outside of the transition zones.


³ Refer to chart on page 16.


 [©] ECLIPSE probes containing o-rings can be used for vacuum (negative pressure) service, but only those probes with glass seal are hermetically sealed to <10-8 cc/sec @ 1 atmosphere helium.
</p>

^{© 1.2} minimum dielectric when end of probe analysis is enabled.

	7y2	7y5
Description	Single Flexible Standard Temp.	Twin Flexible Standard Temp.
Application	Level	Level
Installation	Tank	Tank
Overfill Safe	No	No
Pull Down Force	3000 lbs. (1360 Kg)	3000 lbs (1360 Kg)
Materials—Cable	316 (1.4401)	316 (1.4401)
Probe Outside Diameter	0.19 inches (5 mm)	(2) 0.25 inches (6 mm)
Process Connection		
Threaded Flanged	2" NPT or 2" BSP Various ANSI, EN1092, and proprietary flanges	2" NPT or 2" BSP Various ANSI, EN1092, and proprietary flanges
Available Probe Length	3 to 100 feet (1 to 30 meters)	3 to 100 feet (1 to 30 meters)
Transition Zones ① Top Bottom	18 inches (45 cm) 12 inches (30 cm)	18 inches (45 cm) 12 inches (30 cm)
Dielectric Range ②	4 to 100	1.9 to 100
Vacuum Service 3	Negative Pressure, but no hermetic seal	Negative Pressure, but no hermetic seal
Viscosity	10,000 (mPa.s)	10,000 (mPa.s)
Media Coating	Max. Error 10% of coated length (% Error is dependent on dielectric & thickness)	Max. Error 10% of coated length (% Error is dependent on dielectric & thickness)


- ① Transition zones (areas with reduced accuracy) are dielectric dependent. It is recommended to set the 0-100% measuring range outside of the transition zones.
- ② 1.2 minimum dielectric when end of probe analysis is enabled.
- ③ ECLIPSE probes containing o-rings can be used for vacuum (negative pressure) service, but only those probes with glass seal are hermetically sealed (helium leak <10°cc/sec @ 1 atmos.).</p>

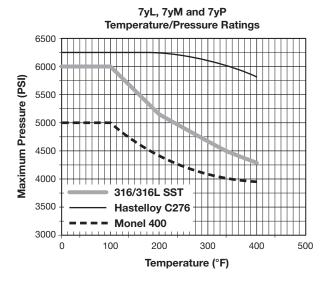

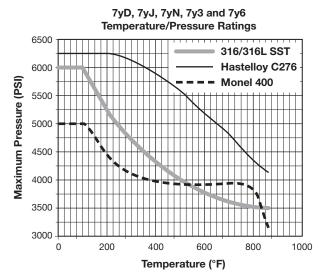

NOTES:

- 7yS steam probes are rated to 1275 psi (88 bar) up to +575° F (+300° C)
- 7y3, 7y6 HTHP flexible probes: Pressure is limited by the chamber
- \bullet 7y2, 7y5 bulk solids probes: 50 psi (3.45 bar) to +150° F (+65° C)
- High pressure probes with threaded fittings are rated as follows:
 7yD, 7yN, 7yP and 7y3 probes with threaded fittings have 3600 psi (248 bar) rating.
 7yM probes with threaded fittings have 2016 psi (139 bar) rating.

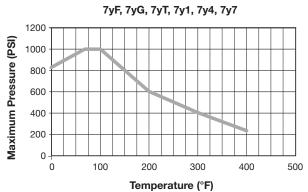

O-RING (SEAL) SELECTION CHART

O-RING/SEAL SPECIFICATIONS

Code	"O"-Ring Material	Max. Process Temperature	Min. Process Temperature	Max. Process Pressure	Not Recommended For Applications	Recommended for Applications
0	Viton® GFLT	400 °F @ 230 psi (200°C @ 16 bar)	-40° F (-40° C)	1000 psi 70° F (70 bar @ 20°C)	Ketones (MEK, acetone), skydrol fluids, amines, anhydrous ammonia, low molecular weight esters and ethers, hot hydrofluoric or chlorosulfuric acids, sour HCs	General purpose, ethylene
1	EPDM	250 °F @ 200 psi (125 °C @14 bar)	-60° F (-50° C)	1000 psi 70° F (70 bar @ 20°C)	Petroleum oils, di-ester base lubricant, steam	Acetone, MEK, skydrol fluids
2	Kalrez [®] 4079	400 °F @ 232 psi (200 °C @ 16 bar)	-40° F (-40° C)	1000 psi 70° F (70 bar @ 20°C)	Hot water/steam, hot aliphatic amines, ethylene oxide, propylene oxide	Inorganic and organic acids (including hydro fluids and nitric), aldehydes, ethylene, organic oils, blycols, silicone oils, vinegar, sour HCs
3	HSN (Highly Saturated Nitrile)	275 °F @ 320 psi (135 °C @ 22 bar)	-4° F (-20° C)	1000 psi 70° F (70 bar @ 20°C)	Halogenated HCs, nitro HCs, phosphate ester hydraulic fluids, ketones (MEK, acetone), strong acids, ozone, automotive brake fluid, steam	NACE applications
4	Buna-N	275 °F @ 320 psi (135 °C @ 22 bar)	-4° F (-20° C)	1000 psi 70° F (70 bar @ 20°C)	Halogenated HCs, nitro HCs, phosphate ester hydraulic fluids, ketones (MEK, acetone), strong acids, ozone, automotive brake fluid	General purpose sealing, petroleum oils and fluids, cold water, silicone greases and oils, di-ester base lubricants, ethylene glycol base fluids
5	Neoprene®	300 °F @ 290 psi (150 °C @ 20 bar)	-65° F (-55° C)	1000 psi 70° F (70 bar @ 20°C)	Phosphate ester fluids, ketones (MEK, acetone)	Refrigerants, high anline point petroleum oils, silicate ester lubricants
6	Chemraz® 505	400 °F @ 200 psi (200 °C @ 14 bar)	-20° F (-30° C)	1000 psi 70° F (70 bar @ 20°C)	Acetaldehyde, ammonia + lithium metal solution, butyraldehyde, di-water, freon, ethylene oxide, liquors, isobutyraldehyde	Inorganic and organic acids, alkalines, ketones, esters, aldehydes, fuels
7	Polyurethane	200 °F @ 420 psi (95 °C @29 bar)	-65° F (-55° C)	1000 psi 70° F (70 bar @ 20°C)	Acids, Ketones, chlorinated HCs,	Hydraulic systems, petroleum oils, HC fuel, oxygen, ozone
8	Aegis PF128 ①	400 °F @ 232 psi (200 °C @ 16 bar)	-4° F (-20° C)	1000 psi 70° F (70 bar @ 20°C)	Black liquor, freon 43, freon 75, galden, KEL-F liquid, molten potassium, molten sodium	Inorganic and organic acids (including hydro fluids and nitric), aldehydes, ethylene, organic oils, gycols, silicone oils, vinegar, sour HCs, steam, amines, ethylene oxide, propylene oxice, NACE applications
9	Kalrez [®] 2035	400 °F @ 232 psi (200 °C @ 16 bar)	-40° F (-40° C)	1000 psi 70° F (70 bar @ 20°C)	Hot water/steam, hot aliphatic amines, ethylene oxide, propylene oxide	Inorganic and organic acids (including hydro fluids and nitric), aldehydes, ethylene, organic oils, blycols, silicone oils, vinegar, sour HCs
А	Kalrez® 6375	400 °F @ 232 psi (200 °C @ 16 bar)	-40° F (-40° C)	1000 psi 70° F (70 bar @ 20°C)	Hot water/steam, hot aliphatic amines, ethylene oxide, propylene oxide	Inorganic and organic acids (including hydro fluids and nitric), aldehydes, ethylene, organic oils, blycols, silicone oils, vinegar, sour HCs
D or N	Glass Ceramic Alloy	850 °F @ 3600 psi (450 °C @ 248 bar)	-320° F (-195° C)	6250 psi 70° F (431 bar @ 20°C)	Hot alkaline solutions HF acid, media with ph>12, direct exposure to saturated steam	General high temperature/high pressure applications, hydrocarbons, full vacuum (hermetic), ammonia, chlorine

① Maximum +300° F (+150° C) for use on steam.

REPLACEMENT OF DISPLACER TRANSMITTERS

ECLIPSE has proven to be the ideal replacement for existing torque tube transmitters. In numerous applications worldwide, customers have found the performance of ECLIPSE Guided Wave Radar transmitters to be superior to that of antiquated torque tube transmitters.

There are several benefits to using the ECLIPSE Model 706 as a replacement for torque tube transmitters:

• Cost:

The cost of a new Model 706 transmitter cost is comparable to rebuilding an aging torque tube.

• Installation:

No field calibration is necessary. The Model 706 transmitter can be configured in minutes with no level movement. (Complete factory pre-configuration is available, which can further decrease the installation effort).

• Performance:

The ECLIPSE Model 706 is unaffected by changes in specific gravity and has no moving parts that can wear and lose tolerance.

• Ease of replacement:

Proprietary and standard ANSI flanges are offered on all ECLIPSE Model 706 probes so existing chamber/cages can be used.

In order to match the proper ECLIPSE transmitter with the proper external cage, consider the following:

• Type of application:

Use the proper GWR probe for the application, see pages 7 and 10 through 16.


• Overfill proof:

For optimum performance, use an Overfill-safe probe in all chamber applications.

Note: "Overfill" occurs when the level rises above the maximum range of operation. *Some GWR probes may provide erroneous output in this zone unless an optimal, impedance-matched design is used.*

• Minimum Cage Size:

- Coaxial or Caged Coaxial probes: 2" minimum
- Enlarged Coaxial probes: 3" minimum
- Twin Cable probes: 4" minimum

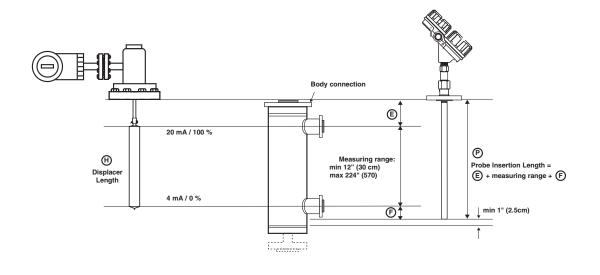






Recommended probe length for replacing displacer transmitters

The table below helps to define the GWR probe length for the most common displacer transmitters. Refer to the proprietary flange selection guide.

Manufacturer	Туре	Process Connection	Displacer Length inches (mm)	Probe Length ① inches (mm)
MAGNETROL	EZ & PN Modulevel®	ANSI/EN flange	≥ 14" (356)	Displacer + 7 (178)
Masoneilan®	Series 1200	Proprietary flange	≥ 14" (356)	Displacer + 8 (203)
	Series 1200	ANSI/EN flange	≥ 16" (406)	Displacer + 8 (203)
Fisher® series 2300 & 2500	249B, 259B, 249C cages	Proprietary flange	≥ 14" (356)	Displacer + 10 (254)
	other cages	ANSI flange	≥ 14" (356)	consult factory
Eckardt®	Series 134, 144	ANSI/EN flange	≥ 14" (356)	consult factory
Tokyo Keiso®	FST-3000	ANSI/EN flange	H = 11.8" (300)	Displacer + 9 (229)
	FS1-3000	ANSI/EN flange	≥ H = 19.7" (500)	Displacer + 9 (229)

① Round down resulting calculation to the nearest inch.

PROPRIETARY FLANGES

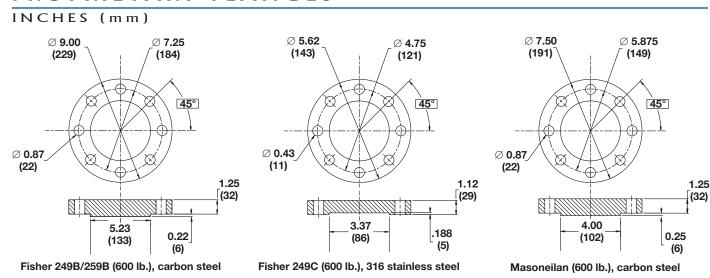

MAGNETROL CHAMBERS

A brief description of the MAGNETROL chamber offering follows. For more details, refer to MAGNETROL Sales Bulletin 41-140.

MAGNETROL has a long tradition in offering cost-effective chambers. The MAGNETROL external chamber is a self-contained cage designed for use with our top mounting level transmitters or switches. Quality construction and a wide selection of configurations make this cage an ideal means of utilizing the power of Guided Wave Radar without mounting directly into the process vessel.



MAGNETROL chambers are available with a wide variety of options, and can be manufactured to comply with various regulations such as:

- Commercial Design
- ASME B31.1 Design Code
- ASME B31.3 Design Code
- NACE Design Code
- PED

Some Model 706 probes can be installed into chambers as small as 2". When a new chamber is required, it can be


ordered together with a factory pre-configured Model 706 for a true "plug and play" installation.

For example:

A standard Model 706-511A-310 explosion-proof transmitter with a Model 7AG-4300-A10-00-021 Caged probe can be used in a 2" chamber. A typical chamber Model Number would be:

F21-4A2D-014

Refer to MAGNETROL Sales Bulletin 41-140 for details on chamber Model Numbers and additional options.

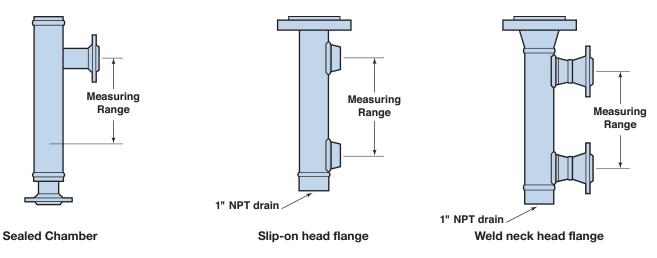




The Most Efficient PC Configuration Tool for Eclipse® Guided Wave Radar Transmitters

PACTware[™] is the modern, user-friendly adjustment software that enables quick configuration and diagnosis of your HART® or FOUNDATION fieldbus[™] Guided Wave Radar transmitters.



GET CONNECTED Simply connect the HART/RS232 or HART/USB serial interface from the PC to the two-wire loop.

Level Monitoring Screen Continuously viewing the level in a tank is the starting point for PACT*ware*™. The position of liquid level can be viewed in a simple visual format on your PC. Level and Output values are shown numerically as well. The screen can be left open to show the relative position of the liquid level.

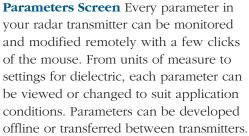

Trending Screen The ability to trend data over a period of time allows insight into overall operation of your GWR transmitter. Trending values are invaluable when attempting advanced configuration or troubleshooting. PACT*ware*™ PC software has the ability to track all parameters of your radar device and save them as a text or picture file.

Echo Curve Screen This screen yields a wealth of useful information: Level; Echo Strength; Actual Echo Curve; Echo Rejection; and Threshold. Blue cursors show the location and echo strength of the reflection currently detected as liquid level.




Level Monitoring Screen



Parameters Screen



Process Trend Screen

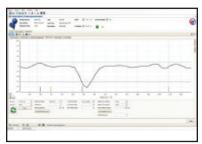

Echo Curve Screen

AGENCY	MODEL APPROVED	APPROVAL CATEGORY	APPROVAL CLASSES
FM PPROVED	706-51XX-1XX	Intrinsically Safe	Class I, Div. 1; Groups A, B, C, & D Class II, Div. 1; Groups E, F, & G T4 Class III, Type 4X, IP67 Entity
	706-51XX-3XX	Explosion-proof (with Intrinsically Safe probe) Dust Ignition-proof	Class I, Div. 1; Groups B, C & D Class II, Div. 1; Groups E, F, & G T4 Class III, Type 4X, IP67
	706-51XX-XXX	Non-Incendive, Suitable for:	Class I, Div. 2; Groups A, B, C, & D Class II, Div. 2; Groups E, F & G T4 Class III, Type 4X, IP67
CSA ®	706-51XX-1XX	Intrinsically Safe	Class I, Div. 1; Groups A, B, C, & D Class II, Div. 1; Group E, F & G T4 Class III, Type 4X, IP66/67 Entity
	706-51XX-3XX	Explosion-proof (with Intrinsically Safe probe) Dust Ignition-proof	Class I, Div. 1; Groups B, C, & D Class II, Div. 1; Group E, F & G T4
	706-51XX-XXX	Non-Incendive Suitable for:	Class III, Type 4X, IP66/67 Class I, Div. 2; Groups A, B, C, & D Class II, Div. 2; Group E, F & G T4 Class III, Type 4X, IP66/67
ATEX	706-51XX-AXX	Intrinsically Safe	II 1G, Ex ia IIC T4 Ga
$\langle x3 \rangle$	706-51XX-CXX	Non-sparking	II 1/3 G Ex nA [ia Ga] IIC T4 Ga/Gc
	706-51XX-DXX	Dust Ex	II 1/2 Ex tb [ia] IIIC T85°C T450°C Db
	706-51XX-BXX	Flame Proof	II 1/2 G Ex d [ia] IIC T6 T1 Ga/Gb
IEC	706-5XXX-AXX	Intrinsically Safe	Ex ia IIC T4 Ga
	706-5XXX-CXX	Non-sparking	Ex nA [ia Ga] IIC T4 Ga/Gc
	706-5XXX-BXX	Flame Proof	Ex d [ia] IIC T6 T1 Ga/Gb



These units are in conformity of:

1. The EMC Directive: 2004/108/EC. The units have been tested to EN 61326.

Note: Single and twin rod probes must be used in metallic vessel or stillwell to maintain CE compliance.

TRANSMITTER


Models available for quick shipment, usually within one week after factory


receipt of a complete purchase order, through the Expedite Ship Plan (ESP). 1 2 3 | BASIC MODEL NUMBER ECLIPSE 4th Generation Guided Wave Radar (GWR) Level Transmitter 4 | POWER 24 VDC, Two-Wire **5** | SIGNAL OUTPUT 4-20 mA with HART 2 FOUNDATION fieldbus™ Communications — Future **6** | SAFETY OPTIONS Standard (FOUNDATION fieldbus only) — Future 1 SIL 2 Hardware - HART only **7** | ACCESSORIES/MOUNTING No Digital Display or Keypad - Integral No Digital Display or Keypad - 3-foot (1 meter) remote 1 No Digital Display or Keypad - 12-foot (3.6 meter) remote 2 A Digital Display and Keypad - Integral Digital Display and Keypad - 3-foot (1 meter) remote В Digital Display and Keypad - 12-foot (3.6 meter) remote 8 | CLASSIFICATION General Purpose, Weatherproof (IP 67) Intrinsically Safe (FM & CSA CL 1 Div 1, Grps A, B, C, D) 1 3 Explosion-proof (FM & CSA CL 1 Div 1, Grps B, C, D) Intrinsically Safe (ATEX/IEC Ex ia IIC T4) A Flame-proof (ATEX/IEC Ex d ia IIC T4) В Non-incendive (ATEX Ex n IIC T6) D Dust Ex (ATEX II) 9 | HOUSING Die-cast Aluminum, Dual-compartment, 45-degree Investment Cast, 316 SS, Dual-compartment, 45-degree **10** | CONDUIT CONNECTION ½" NPT 1 M20 ½" NPT with sunshade 2 M20 with sunshade 3

0

5

inches (mm)

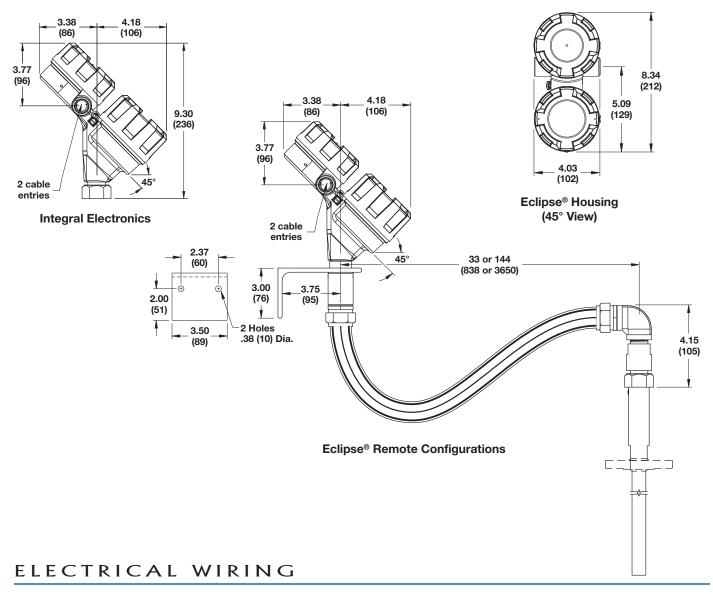

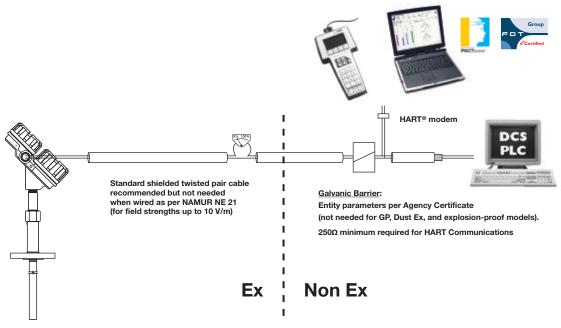

ENLARGED COAXIAL PROBE

1 | TECHNOLOGY

Models available for quick shipment, usually within one week after factory receipt of a complete purchase order, through the Expedite Ship Plan (ESP).

42

ECLIPSE GWR Probes - Model 706

2 | MEASUREMENT SYSTEM

A	English
С	Metric

3 | CONFIGURATION/STYLE (RIGID)

D	Enlarged Coaxial, High Temp/High Pressure: Overfill w/Glass Seal (+850° F/+450° C) — Available only with 10th digit N or D
P	Enlarged Coaxial, High Pressure: Overfill w/Glass Seal (+400° F/+200° C) — Available only with 10th digit N or D
Т	Enlarged Coaxial, Overfill Standard O-Ring Seal (+400° F/+200° C) — Not available with 10th digit N or D

4 5 | PROCESS CONNECTION – SIZE/TYPE (consult factory for other process connections)

Threaded 41

ANSI Flanges		
2"	150# ANSI RF ①	
2"	300# ANSI RF ①	
2"	600# ANSI RF ①	
2"	600# ANSI RTJ ①	
3"	150# ANSI RF	
3"	300# ANSI RF	
3"	600# ANSI RF	
3"	900# ANSI RF	
3"	1500# ANSI RF	
3"	2500# ANSI RF	
3"	600# ANSI RTJ	
3"	900# ANSI RTJ	
	2" 2" 2" 2" 3" 3" 3" 3" 3" 3"	

2" NPT Thread ①

5M	3"	1500# ANSI RTJ
5N	3"	2500# ANSI RTJ
63	4"	150# ANSI RF
6 4	4"	300# ANSI RF
65	4"	600# ANSI RF
6 6	4"	900# ANSI RF
6 7	4"	1500# ANSI RF
68	4"	2500# ANSI RF
6K	4"	600# ANSI RTJ
6L	4"	900# ANSI RTJ
6M	4"	1500# ANSI RTJ
6N	4"	2500# ANSI RTJ

2" BSP (G1) Thread ①

EN Flanges


DΑ	DN 50, PN 16	EN 1092-1 TYPE A ①
DΒ	DN 50, PN 25/40	EN 1092-1 TYPE A ①
D D	DN 50, PN 63	EN 1092-1 TYPE B2 ①
DΕ	DN 50, PN 100	EN 1092-1 TYPE B2 ①
ЕА	DN 80, PN 16	EN 1092-1 TYPE A
ЕВ	DN 80, PN 25/40	EN 1092-1 TYPE A
ΕD	DN 80, PN 63	EN 1092-1 TYPE B2
ЕЕ	DN 80, PN 100	EN 1092-1 TYPE B2
ΕF	DN 80, PN 160	EN 1092-1 TYPE B2
E G	DN 80, PN 250	EN 1092-1 TYPE B2

ЕН	DN 80, PN 320	EN 1092-1 TYPE B2
ΕJ	DN 80, PN 400	EN 1092-1 TYPE B2
F A	DN 100, PN 16	EN 1092-1 TYPE A
FΒ	DN 100, PN 25/40	EN 1092-1 TYPE A
F D	DN 100, PN 63	EN 1092-1 TYPE B2
FΕ	DN 100, PN 100	EN 1092-1 TYPE B2
FF	DN 100, PN 160	EN 1092-1 TYPE B2
F G	DN 100, PN 250	EN 1092-1 TYPE B2
FΗ	DN 100, PN 320	EN 1092-1 TYPE B2
F J	DN 100, PN 400	EN 1092-1 TYPE B2

Torque Tube Mating Flanges ②

ТТ	600# Fisher (249B/259B) in carbon steel – as per dimensions on page 18
ΤU	600# Fisher (249C) in stainless steel – as per dimensions on page 18
UΤ	600# Masoneilan flange in carbon steel – as per dimensions on page 18
UU	600# Masoneilan flange in stainless steel – as per dimensions on page 18

- $\ensuremath{\mathbb{O}}$ Confirm mounting conditions/nozzle diameter to ensure sufficient clearance.
- ② Always check dimensions if ANSI/EN flanges are not used.



ENLARGED COAXIAL PROBE

6 | CONSTRUCTION CODES

0	Industrial
K	ASME B31.1
L	ASME B31.3
M	ASME B31.3 & NACE MR0175/MR0103
N	NACE MR0175/MR0103

7 | FLANGE OPTIONS — Offset flanges are only available with small coaxial probes

None

8 | MATERIAL OF CONSTRUCTION - FLANGE/NUT/ROD/INSULATION

A	316 SS/316L SS (Probe O.D. 1.75" (45mm))
В	Hastelloy C (Probe O.D. 1.93" (49mm))
С	Monel (Probe O.D. 1.93" (49mm))
R	316 SS/316L SS with Carbon Steel Flange (Probe O.D. 1.75" (45 mm))
S	Hastelloy C with Carbon Steel Flange (Probe O.D. 1.93" (49mm))
Т	Monel with Carbon Steel Flange (Probe O.D. 1.93" (49mm))

9 | SPACER MATERIAL

1	TFE (+400° F/+200° C) — Available only with 3rd digit P or T — $\varepsilon_{\rm r} \ge 1.4$
2	PEEK HT — Available only with 3rd digit D (+650° F/+345° C) — $\varepsilon_{\rm r} \ge 1.4$
3	Ceramic (High Temp. >+800° F/+425° C) — Available only with 3rd digit D — $\varepsilon_{\rm r} \ge 2.0$
4	Celazole (+800° F/+425° C) — Available only with 3rd digit D — $\mathcal{E}_{\rm r} \ge 1.4$
5	None - with metal shorting rod — $\mathcal{E}_{\rm r} \ge 1.4$ — Future

10 O-RING MATERIALS/SEAL OPTIONS


2 Kalrez® 4079 — Available only with 3rd digit T 8 Aegis PF 128 (NACE) — Available only with 3rd digit T A Kalrez 6375 — Available only with 3rd digit T D None/Glass Ceramic Alloy (dual-seal design with annunciator fitting)—Available only with 3rd digit D or P N None/Glass Ceramic Alloy — Available only with 3rd digit D or P	L	0	Viton® GFLT — Available only with 3rd digit T
A Kalrez 6375 — Available only with 3rd digit T D None/Glass Ceramic Alloy (dual-seal design with annunciator fitting)—Available only with 3rd digit D or P	I	2	Kalrez® 4079 — Available only with 3rd digit T
D None/Glass Ceramic Alloy (dual-seal design with annunciator fitting)—Available only with 3rd digit D or P	ſ	8	Aegis PF 128 (NACE) — Available only with 3rd digit T
	I	A	Kalrez 6375 — Available only with 3rd digit T
N None/Glass Ceramic Alloy — Available only with 3rd digit D or P	ſ	D	None/Glass Ceramic Alloy (dual-seal design with annunciator fitting)—Available only with 3rd digit D or P
		N	None/Glass Ceramic Alloy — Available only with 3rd digit D or P

1

11 | PROBE SIZE/ELEMENT TYPE/FLUSHING CONNECTION

0	Standard Enlarged Coaxial Probe
1	Standard Enlarged Coaxial Probe with Flushing Port

12 | SPECIAL OPTIONS — See page 36

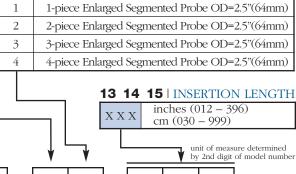

Single Length Probe (Non-Segmented)

SMALL COAXIAL PROBE

1 | TECHNOLOGY

Models available for quick shipment, usually within one week after factory receipt of a complete purchase order, through the Expedite Ship Plan (ESP).

7 ECLIPSE GWR Probes - Model 706

2 | MEASUREMENT SYSTEM

A	English
С	Metric

3 | CONFIGURATION/STYLE (RIGID)

D	Small Coaxial, High Temp/High Pressure: Overfill w/Glass Seal (+850° F/+450° C) — Only available with 10th digit N or D
P	Small Coaxial, High Pressure: Overfill w/Glass Seal (+400° F/+200° C) — Only available with 10th digit N or D
S	Small Coaxial, Saturated Steam (+575° F/+300° C), Max. Length=240" (610 cm) — Only available with 10th digit N, 11th digit 2
Т	Small Coaxial, Overfill Standard O-Ring Seal (+400° F/+200° C) — Not available with 10th digit N or D

4 5 | PROCESS CONNECTION – SIZE/TYPE (consult factory for other process connections)

Threaded

1 1	¾" NPT Thread ③	2 2	1" BSP (G1) Thread ③
4 1	2" NPT Thread – Only available with 3rd Digit D	4 2	2" BSP (G1) Thread – Only available with 3rd Digit D

ANSI Flanges

2 3	1" 150# ANSI RF ① ③	38	1 ½" 2500# ANSI RF ③	5 3 3	3" 150# ANSI RF	6 3 4"	150# ANSI RF
2 4	1" 300# ANSI RF ① ③	3 N	1 ½" 2500# ANSI RTJ ③	5 4 3	3" 300# ANSI RF	6 4 4"	300# ANSI RF
2 5	1" 600# ANSI RF ① ③	4 3	2" 150# ANSI RF	5 5 3	3" 600# ANSI RF	6 5 4"	600# ANSI RF
2 K	1" 600# ANSI RTJ ① ③	4 4	2" 300# ANSI RF	56 3	3" 900# ANSI RF	6 6 4"	900# ANSI RF
3 3	1 ½" 150# ANSI RF ③	4 5	2" 600# ANSI RF	57 3	3" 1500# ANSI RF	6 7 4"	1500# ANSI RF
3 4	1 ½" 300# ANSI RF ③	47	2" 900/1500# ANSI RF	58 3	3" 2500# ANSI RF	68 4"	2500# ANSI RF
3 5	1 ½" 600# ANSI RF ③	4 8	2" 2500# ANSI RF	5 K 3	3" 600# ANSI RTJ	6 K 4"	600# ANSI RTJ
3 K	1 ½" 600# ANSI RTJ ③	4 K	2" 600# ANSI RTJ	5 L 3	3" 900# ANSI RTJ	6 L 4"	900# ANSI RTJ
3 7	1 ½" 900/1500# ANSI RF③	4 M	2" 900/1500# ANSI RTJ	5 M 3	3" 1500# ANSI RTJ	6 M 4"	1500# ANSI RTJ
3 M	1 ½" 900/1500# ANSI RTJ③	4 N	2" 2500# ANSI RTJ	5 N 3	3" 2500# ANSI RTJ	6 N 4"	2500# ANSI RTJ

EN Flanges


ВВ	DN 25, PN 16/25/40	EN 1092-1 TYPE A ① ③
ВС	DN 25, PN 63/100	EN 1092-1 TYPE B2 ① ③
СВ	DN 40, PN 16/25/40	EN 1092-1 TYPE A ③
СС	DN 40, PN 63/100	EN 1092-1 TYPE B2 3
C F	DN 40, PN 160	EN 1092-1 TYPE B2 ③
C G	DN 40, PN 250	EN 1092-1 TYPE B2 ③
СН	DN 40, PN 320	EN 1092-1 TYPE B2 ③
СЈ	DN 40, PN 400	EN 1092-1 TYPE B2 ③
DA	DN 50, PN 16	EN 1092-1 TYPE A
DΒ	DN 50, PN 25/40	EN 1092-1 TYPE A
DD	DN 50, PN 63	EN 1092-1 TYPE B2
DE	DN 50, PN 100	EN 1092-1 TYPE B2
DF	DN 50, PN 160	EN 1092-1 TYPE B2
DG	DN 50, PN 250	EN 1092-1 TYPE B2
DΗ	DN 50, PN 320	EN 1092-1 TYPE B2
DЈ	DN 50, PN 400	EN 1092-1 TYPE B2

ΕA	DN 80, PN 16	EN 1092-1 TYPE A
ЕВ	DN 80, PN 25/40	EN 1092-1 TYPE A
ΕD	DN 80, PN 63	EN 1092-1 TYPE B2
ΕE	DN 80, PN 100	EN 1092-1 TYPE B2
ΕF	DN 80, PN 160	EN 1092-1 TYPE B2
ΕG	DN 80, PN 250	EN 1092-1 TYPE B2
ЕН	DN 80, PN 320	EN 1092-1 TYPE B2
ЕЈ	DN 80, PN 400	EN 1092-1 TYPE B2
FΑ	DN 100, PN 16	EN 1092-1 TYPE A
FΒ	DN 100, PN 25/40	EN 1092-1 TYPE A
F D	DN 100, PN 63	EN 1092-1 TYPE B2
FΕ	DN 100, PN 100	EN 1092-1 TYPE B2
FF	DN 100, PN 160	EN 1092-1 TYPE B2
F G	DN 100, PN 250	EN 1092-1 TYPE B2
FΗ	DN 100, PN 320	EN 1092-1 TYPE B2
FΙ	DN 100. PN 400	EN 1092-1 TYPE B2

Torque Tube Mating Flanges 2

ТТ	600# Fisher (249B/259B) in carbon steel – as per dimensions on page 18
ΤU	600# Fisher (249C) in stainless steel – as per dimensions on page 18
UT	600# Masoneilan flange in carbon steel – as per dimensions on page 18
UU	600# Masoneilan flange in stainless steel – as per dimensions on page 18

- ① Confirm mounting conditions/nozzle diameter to ensure sufficient clearance.
- ② Always check dimensions if ANSI/EN flanges are not used.



SMALL COAXIAL PROBE

| CONSTRUCTION CODES

0	Industrial
K	ASME B31.1
L	ASME B31.3
M	ASME B31.3 & NACE MR0175/MR0103
N	NACE MR0175/MR0103

7 | FLANGE OPTIONS — Offset flanges are only available with small coaxial probes

0	None
1	Offset (For use with AURORA) — 4" Only available with 3rd digit P, S or T
2	Offset with ½" NPT Vent (For use with AURORA) — 4" Only available with 3rd digit P, S or T
3	Offset with ¾" NPT Vent (For use with AURORA) — 4" Only available with 3rd digit P, S or T

| MATERIAL OF CONSTRUCTION - FLANGE/NUT/ROD/INSULATION

A	316 SS/316L SS
В	Hastelloy C
С	Monel — Not available with 3rd Digit S
R	316 SS/316L SS with Carbon Steel Flange
S	Hastelloy C with Carbon Steel Flange
Т	Monel with Carbon Steel Flange — Not available with 3rd Digit S


| SPACER MATERIAL

1	TFE (+400° F/+200° C) — Only available with 3rd digit P or T — $\varepsilon_{\rm r} \ge 1.4$
2	PEEK HT — Only available with 3rd digit D (+650° F/+345° C) or S (+575° F/+300° C) — $\varepsilon_{\rm r} \ge 1.4$
3	Ceramic (Temp. >+650° F/+345° C) — Only available with 3rd digit D — $\varepsilon_{\rm r} \ge 2.0$
5	None - with metal shorting rod — $\mathcal{E}_{\rm r} \ge 1.4$ — Future
	· · · · · · · · · · · · · · · · · · ·

| O-RING MATERIALS/SEAL OPTIONS

	0	Viton® GFLT — Only Available with 3rd digit T	
	2 Kalrez® 4079 — Only Available with 3rd digit T		
	8	Aegis PF 128 (NACE) — Only Available with 3rd digit T	
	A	Kalrez 6375 — Only Available with 3rd digit T	
Г	D	None/Glass Ceramic Alloy (dual-seal design with annunciator fitting)—Only available with 3rd digit D or P	
	N	None/Glass Ceramic Alloy — Available only with 3rd digit D or P	



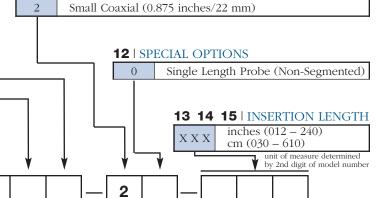

CAGED PROBE

Models available for quick shipment, usually within one week after factory receipt of a complete purchase order, through the Expedite Ship Plan (ESP).

1 | TECHNOLOGY

7 ECLIPSE GWR Probes - Model 706

2 | MEASUREMENT SYSTEM

A	English
С	Metric

3 | CONFIGURATION/STYLE (RIGID)

G	Overfill Caged Rigid Probe for use in chambers +400° F (+200° C) (Only available with 2", 3", and 4" flanges)	
ī	Overfill Caged High Temp/High Pressure Probe with Glass Seal for use in chambers +850° F (+450° C)	
J	(Only available with 2", 3", and 4" flanges)	
, T	Overfill Caged High Pressure Probe with Glass Seal for use in chambers +400° F (+200° C)	
L	(Only available with 2", 3", and 4" flanges)	

$\textbf{4.5} \mid \text{PROCESS CONNECTION} - \text{SIZE/TYPE (consult factory for other process connections)} \ \textcircled{1} \\ \text{ANSI Flanges}$

4 3	2"	150# ANSI RF
4 4	2"	300# ANSI RF
4 5	2"	600# ANSI RF
47	2"	900/1500# ANSI RF
48	2"	2500# ANSI RF
4 K	2"	600# ANSI RTJ
4 M	2"	900/1500# ANSI RTJ
4 N	2"	2500# ANSI RTJ
5 3	3"	150# ANSI RF

5 4	3"	300# ANSI RF
5 5	3"	600# ANSI RF
5 6	3"	900# ANSI RF
5 7	3"	1500# ANSI RF
58	3"	2500# ANSI RF
5 K	3"	600# ANSI RTJ
5 L	3"	900# ANSI RTJ
5 M	3"	1500# ANSI RTJ
5 N	3"	2500# ANSI RTJ

63	4"	150# ANSI RF
6 4	4"	300# ANSI RF
65	4"	600# ANSI RF
6 6	4"	900# ANSI RF
6 7	4"	1500# ANSI RF
68	4"	2500# ANSI RF
6 K	4"	600# ANSI RTJ
6 L	4"	900# ANSI RTJ
6 M	4"	1500# ANSI RTJ
6 N	4"	2500# ANSI RTJ

EN Flanges


D A	DN 50, PN 16	EN 1092-1 TYPE A
DΒ	DN 50, PN 25/40	EN 1092-1 TYPE A
D D	DN 50, PN 63	EN 1092-1 TYPE B2
DΕ	DN 50, PN 100	EN 1092-1 TYPE B2
D F	DN 50, PN 160	EN 1092-1 TYPE B2
D G	DN 50, PN 250	EN 1092-1 TYPE B2
DΗ	DN 50, PN 320	EN 1092-1 TYPE B2
DЈ	DN 50, PN 400	EN 1092-1 TYPE B2
ЕА	DN 80, PN 16	EN 1092-1 TYPE A
ЕВ	DN 80, PN 25/40	EN 1092-1 TYPE A
ΕD	DN 80, PN 63	EN 1092-1 TYPE B2
ЕЕ	DN 80, PN 100	EN 1092-1 TYPE B2

ΕF	DN 80, PN 160	EN 1092-1 TYPE B2
E G	DN 80, PN 250	EN 1092-1 TYPE B2
ЕН	DN 80, PN 320	EN 1092-1 TYPE B2
ЕЈ	DN 80, PN 400	EN 1092-1 TYPE B2
F A	DN 100, PN 16	EN 1092-1 TYPE A
FΒ	DN 100, PN 25/40	EN 1092-1 TYPE A
F D	DN 100, PN 63	EN 1092-1 TYPE B2
FΕ	DN 100, PN 100	EN 1092-1 TYPE B2
FF	DN 100, PN 160	EN 1092-1 TYPE B2
F G	DN 100, PN 250	EN 1092-1 TYPE B2
FΗ	DN 100, PN 320	EN 1092-1 TYPE B2
F J	DN 100, PN 400	EN 1092-1 TYPE B2

Torque Tube Mating Flanges 2

	ТТ	600# Fisher (249B/259B) in carbon steel – as per dimensions on page 18
	ΤU	600# Fisher (249C) in stainless steel – as per dimensions on page 18
I	UΤ	600# Masoneilan flange in carbon steel – as per dimensions on page 18
	UU	600# Masoneilan flange in stainless steel – as per dimensions on page 18

- ① Confirm mounting conditions/nozzle diameter to ensure sufficient clearance.
- ② Always check dimensions if ANSI/EN flanges are not used.



CAGED PROBE

| CONSTRUCTION CODES

0	Industrial
K	ASME B31.1
L	ASME B31.3
M	ASME B31.3 & NACE MR0175/MR0103
N	NACE MR0175/MR0103

| FLANGE OPTIONS

0	None
1	Offset (For use with AURORA)—4" Only available with 3rd digit G and 4th digit 6
2	Offset with ½" NPT Vent (For use with AURORA)—4" Only available with 3rd digit G and 4th digit 6
3	Offset with ¾" NPT Vent (For use with AURORA)—4" Only available with 3rd digit G and 4th digit 6

| MATERIAL OF CONSTRUCTION - MFG/NUT/ROD/INSULATION

A	316 SS/316L SS
В	Hastelloy C
С	Monel
R	316 SS/316L SS with Carbon Steel Flange
S	Hastelloy C with Carbon Steel Flange
Т	Monel with Carbon Steel Flange


9 | SPACER MATERIAL

2	PEEK HT (+650° F/+345° C)
3	Ceramic (High Temp.>+800° F/+425° C) — Only available with 3rd digit J
4	Celazole® (+800° F/+425° C) — Only available with 3rd digit J

| O-RING MATERIALS/SEAL OPTIONS

0	Viton® GFLT — Not available with 3rd digit J or L	
2	Kalrez 4079 — Not available with 3rd digit J or L	
8	Aegis PF 128 (NACE) — Not available with 3rd digit J or L	
A	Kalrez 6375 — Not available with 3rd digit J or L	
D	None/Glass Ceramic Alloy (Dual Seal Design with annunciator fitting) — Not available with 3rd digit G	
N	None/Glass Ceramic Alloy — Not available with 3rd digit G	

11 | PROBE SIZE/ELEMENT TYPE/FLUSHING CONNECTION

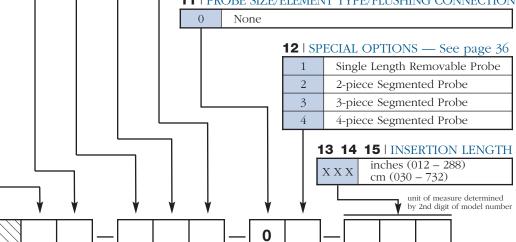

SINGLE ROD RIGID PROBE

Models available for quick shipment, usually within one week after factory receipt of a complete purchase order, through the Expedite Ship Plan (ESP).

1 | TECHNOLOGY

7 ECLIPSE GWR Probes - Model 706

2 | MEASUREMENT SYSTEM

A	English
С	Metric

3 | CONFIGURATION/STYLE (RIGID)

F	Single Rod, Standard (+400° F/200° C) for in-tank applications
M	Single Rod, High Pressure Probe with glass seal (+400° F/+200° C), for in-tank applications
N	Single Rod, High Temp/High Pressure with glass seal (+850° F/+450° C), for in-tank applications (2", DN50 and larger)

4 5 | PROCESS CONNECTION – SIZE/TYPE (consult factory for other process connections) ①

Threaded

2 1	1" NPT Thread (7yF and 7yM only)
4 1	2" NPT Thread

	2 2	1" BSP (G1) Thread (7yF and 7yM only)
Ì	4 2	2" BSP (G1) Thread

ANSI Flanges

3 3	1 ½" 150# ANSI RF ③
3 4	1 ½" 300# ANSI RF ③
3 5	1 ½" 600# ANSI RF ③
4 3	2" 150# ANSI RF ①
4 4	2" 300# ANSI RF ①
4 5	2" 600# ANSI RF ①
47	2" 900/1500# ANSI RF
48	2" 2500# ANSI RF
4 K	2" 600# ANSI RTJ
4 M	2" 900/1500# ANSI RTJ

4 N	2"	2500# ANSI RTJ
5 3	3"	150# ANSI RF
5 4	3"	300# ANSI RF
5 5	3"	600# ANSI RF
5 6	3"	900# ANSI RF
5 7	3"	1500# ANSI RF
5 8	3"	2500# ANSI RF
5 K	3"	600# ANSI RTJ
5 L	3"	900# ANSI RTJ
5 M	3"	1500# ANSI RTJ


5 N	3" 2500# ANSI RTJ
63	4" 150# ANSI RF
6 4	4" 300# ANSI RF
6.5	4" 600# ANSI RF
6 6	4" 900# ANSI RF
6 7	4" 1500# ANSI RF
68	4" 2500# ANSI RF
6 K	4" 600# ANSI RTJ
6 L	4" 900# ANSI RTJ
6 M	4" 1500# ANSI RTJ
6 N	4" 2500# ANSI RTJ

EN Flanges

СВ	DN 40, PN 16/25/40) EN 1092-1 TYPE A
CC	DN 40, PN 63/100	EN 1092-1 TYPE B2
C F	DN 40, PN 160	EN 1092-1 TYPE B2
C G	DN 40, PN 250	EN 1092-1 TYPE B2
D A	DN 50, PN 16	EN 1092-1 TYPE A ①
DΒ	DN 50, PN 25/40	EN 1092-1 TYPE A ①
D D	DN 50, PN 63	EN 1092-1 TYPE B2 ①
DE	DN 50, PN 100	EN 1092-1 TYPE B2 ①
DF	DN 50, PN 160	EN 1092-1 TYPE B2
DG	DN 50, PN 250	EN 1092-1 TYPE B2
DΗ	DN 50, PN 320	EN 1092-1 TYPE B2
DЈ	DN 50, PN 400	EN 1092-1 TYPE B2
ΕA	DN 80, PN 16	EN 1092-1 TYPE A ①
ЕВ	DN 80, PN 25/40	EN 1092-1 TYPE A

ΕD	DN 80, PN 63	EN 1092-1 TYPE B2
ЕЕ	DN 80, PN 100	EN 1092-1 TYPE B2
ΕF	DN 80, PN 160	EN 1092-1 TYPE B2
ΕG	DN 80, PN 250	EN 1092-1 TYPE B2
ЕН	DN 80, PN 320	EN 1092-1 TYPE B2
ЕЈ	DN 80, PN 400	EN 1092-1 TYPE B2
F A	DN 100, PN 16	EN 1092-1 TYPE A
FΒ	DN 100, PN 25/40	EN 1092-1 TYPE A
F D	DN 100, PN 63	EN 1092-1 TYPE B2
FΕ	DN 100, PN 100	EN 1092-1 TYPE B2
FF	DN 100, PN 160	EN 1092-1 TYPE B2
F G	DN 100, PN 250	EN 1092-1 TYPE B2
FΗ	DN 100, PN 320	EN 1092-1 TYPE B2
F J	DN 100, PN 400	EN 1092-1 TYPE B2

① Confirm mounting conditions/nozzle diameter to ensure sufficient clearance.



SINGLE ROD RIGID PROBE

6 | CONSTRUCTION CODES

0	Industrial
K	ASME B31.1
L	ASME B31.3
M	ASME B31.3 & NACE MR0175/MR0103
N	NACE MR0175/MR0103

7 | FLANGE OPTIONS None

0

8 MATERIAL OF CONSTRUCTION - MFG/NUT/ROD/INSULATION
A LANGUEDIAL CAG CANCEIDITCHIAN AND AND THE TOP ANALISI I ATTAN
OTMATERIAL OF CONSTRUCTION - MECHANISTICATION

	Third Ellin of Cornellic Crici, In Cornell, Italy In Committee		
A	316 SS/316L SS		
В	Hastelloy C		
С	Monel		
F	Faced Flange, PFA coated wetted surfaces — Only available with Digit 3rd digit F		
P	PFA coated rod — Only available with Digit 3rd digit F		
R	316 SS/316L SS with Carbon Steel Flange		
S	Hastelloy C with Carbon Steel Flange		
Т	Monel with Carbon Steel Flange		

9 | SPACER MATERIAL

l	0	None – Not available with 3rd Digit N
	2	PEEK HT (+650° F/+345° C) — Only available with 3rd digit N
	3	Ceramic (High Temp.>+800° F/+425° C) — Only available with 3rd digit N
ĺ	4	Celazole $^{\text{\$}}$ (+800° F/+425° C) — Only available with 3rd digit N

10 | O-RING MATERIALS/SEAL OPTIONS

0	Viton® GFLT — Not available with 3rd digit M or N
2	Kalrez 4079 — Not available with 3rd digit M or N
8	Aegis PF 128 (NACE) — Not available with 3rd digit M or N
A	Kalrez 6375 — Not available with 3rd digit M or N
D	None/Glass Ceramic Alloy Dual Seal with annunciator fitting — Not available with 3rd digit F
N	None/Glass Ceramic Alloy Dual Seal—Not available with 3rd digit F

11 | PROBE SIZE/ELEMENT TYPE/FLUSHING CONNECTION


Standard Single Rod

12 | SPECIAL OPTIONS

Non-Removable Rod—Only available with PFA Coated Probes(8th digit F or P) Removable Rod — Not available with PFA Coated 1 Probes(8th Digit F or P)



inches (012 – 288) X X Xcm (030 - 732)unit of measure determined by 2nd digit of model number



SINGLE FLEXIBLE PROBE

Models available for quick shipment, usually within one week after factory receipt of a complete purchase order, through the Expedite Ship Plan (ESP).

1 | TECHNOLOGY

7 ECLIPSE GWR Probes - Model 706

2 | MEASUREMENT SYSTEM

A	English
С	Metric

3 | SPECIALTY FLEXIBLE PROBES

_	TOT BOTT TEMADES TROBES				
	1	Single Cable Flexible standard for in-tank applications (+400° F/+200° C)			
	2	Single Cable Flexible Light Duty Bulk Solids			
	3	Single Cable Flexible HTHP for in-tank applications (+850° F/+450° C) — (Future)			
	4	Single Cable Flexible standard for chamber applications (+400° F/+200° C) — (Future)			
	6	Single Cable Flexible HTHP for chamber applications (+850° F/+450° C) — (Future)			

4 5 | PROCESS CONNECTION – SIZE/TYPE (consult factory for other process connections)

Threaded


4 1	2" NPT Thread		4 2	2" BSP (G1) Thread
-----	---------------	--	-----	--------------------

ANSI Flanges


11110111	angeo	
4 3	2"	150# ANSI RF
4 4	2"	300# ANSI RF
4 5	2"	600# ANSI RF
5 3	3"	150# ANSI RF
5 4	3"	300# ANSI RF
5 5	3"	600# ANSI RF
6 3	4"	150# ANSI RF
6 4	4"	300# ANSI RF
6.5	4"	600# ANSI RF

EN Flanges

D A	DN 50, PN 16	EN 1092-1 TYPE A
DΒ	DN 50, PN 25/40	EN 1092-1 TYPE A
DD	DN 50, PN 63	EN 1092-1 TYPE B2
DE	DN 50, PN 100	EN 1092-1 TYPE B2
ЕА	DN 80, PN 16	EN 1092-1 TYPE A
ЕВ	DN 80, PN 25/40	EN 1092-1 TYPE A
ΕD	DN 80, PN 63	EN 1092-1 TYPE B2
ΕE	DN 80, PN 100	EN 1092-1 TYPE B2
F A	DN 100, PN 16	EN 1092-1 TYPE A
FΒ	DN 100, PN 25/40	EN 1092-1 TYPE A
F D	DN 100, PN 63	EN 1092-1 TYPE B2
FΕ	DN 100, PN 100	EN 1092-1 TYPE B2



SINGLE FLEXIBLE PROBE

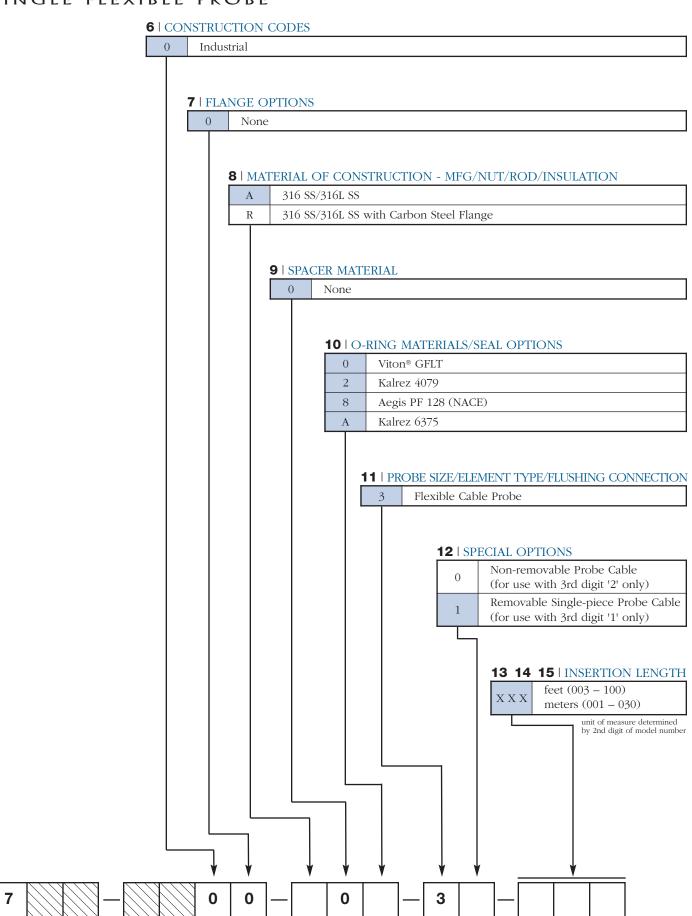

TWIN FLEXIBLE PROBE

Models available for quick shipment, usually within one week after factory receipt of a complete purchase order, through the Expedite Ship Plan (ESP).

1 | TECHNOLOGY

ECLIPSE GWR Probes - Model 706

2 | MEASUREMENT SYSTEM

A	English
С	Metric

3 | SPECIALTY FLEXIBLE PROBES

5	Twin Flexible Light Duty Bulk Solids with FEP Webbing
7	Twin Flexible - 316 SS with FEP Webbing

4 5 | PROCESS CONNECTION – SIZE/TYPE (consult factory for other process connections)

Threaded ①

4 1	2" NPT Thread		4 2	2" BSP (G1) Thread
-----	---------------	--	-----	--------------------


ANSI Flanges

5 3	3"	150 lbs. ANSI RF
5 4	3"	300 lbs. ANSI RF
5 5	3"	600 lbs. ANSI RF
6 3	4"	150 lbs. ANSI RF
6 4	4"	300 lbs. ANSI RF
6.5	4"	600 lbs. ANSI RF

EN Flanges


ЕА	DN 80, PN 16	EN 1092-1 TYPE A
ЕВ	DN 80, PN 25/40	EN 1092-1 TYPE A
ΕD	DN 80, PN 63	EN 1092-1 TYPE B2
EΕ	DN 80, PN 100	EN 1092-1 TYPE B2
FΑ	DN 100, PN 16	EN 1092-1 TYPE A
FΒ	DN 100, PN 25/40	EN 1092-1 TYPE A
F D	DN 100, PN 63	EN 1092-1 TYPE B2
FΕ	DN 100, PN 100	EN 1092-1 TYPE B2

① Confirm mounting conditions/nozzle diameter to ensure sufficient clearance.



6 | CONSTRUCTION CODES

TWIN FLEXIBLE PROBE

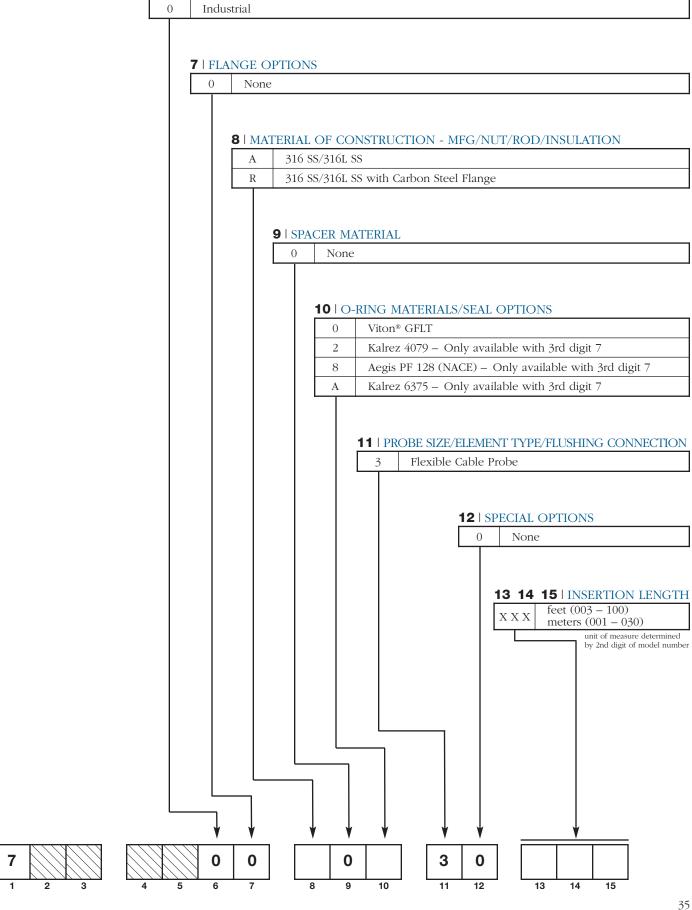


SEGMENTED PROBE OPTIONS

12th DIGIT OF MODEL NUMBER

Probe Model	One Segment	Two Segments	Three Segments	Four Segments
Coaxial Models 7yD, 7yP and 7yT (Enlarged versions only) (3", DN 80 Process Connections and larger)	24 – 120"	48 – 240"	72 – 360"	96 – 396"
	(60 – 305 cm)	(120 – 610 cm)	(180 – 914 cm)	(240 – 990 cm)
Caged Models	12 – 120"	24 – 240"	36 – 288"	48 – 288"
7yG, 7yL and 7yJ	(30 – 305 cm)	(60 – 610 cm)	(90 – 732 cm)	(120 – 732 cm)

NOTE: Segments will be evenly divided over the length of the probe.

INCHES (mm)

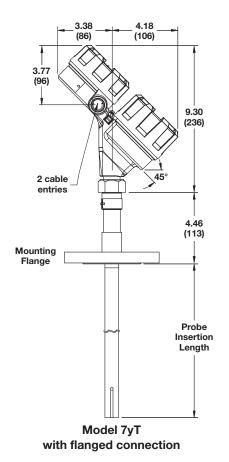

3.77 (96)

2 cable entries

7.76 (197)

Mounting Flange


Probe Insertion Length

Model 7yP

with flanged connection

3.38 (86) 4.18

(106)

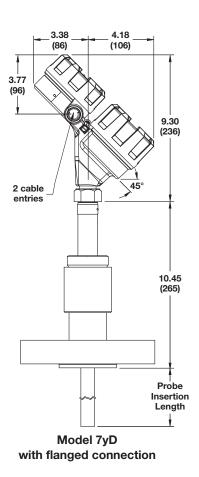


3.38 4.18 (86) 9.30 (236)


2 cable entries 9.30 (236)

11.55 (293)

Probe Insertion Length

Model 7yS with flanged connection

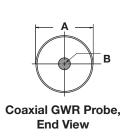




Coaxial Probe Slots

Inches (mm)


Dim.	Small Diameter	Enlarged (standard)
Α	0.88 (22.5)	1.75 (45) - SST 1.92 (49) - HC and Monel
В	0.31 (8)	0.63 (16)
С	4.08 (100)	6.05 (153)
D	0.15 (4)	0.30 (8)
Е	3.78 (96)	5.45 (138)


INCHES (mm)

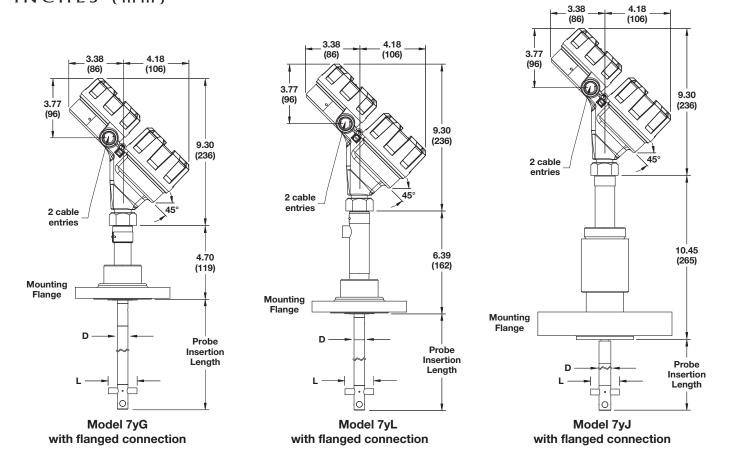


Cage Size	Probe Rod Diameter (D)	Spacer Length (L)
2"	0.5 to 0.75" (13 to 19 mm)	1.82" (46 mm)
3"	0.75 to 1.13" (19 to 29 mm)	2.64" (67 mm)
4"	1.05 to 1.50" (27 to 38 mm)	3.60" (91 mm)

INCHES (mm)

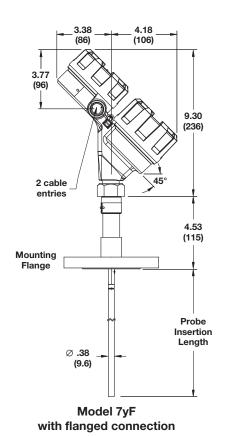

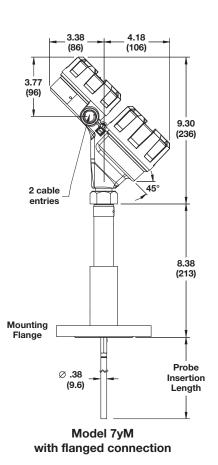

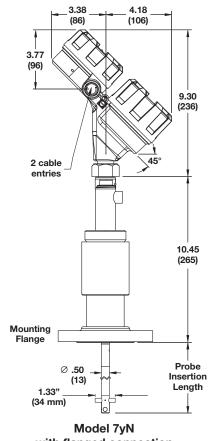

SINGLE FLEXIBLE PROBE DIMENSIONS

INCHES (mm) 4.18 (106) 3.38 (86) 4.18 (106) (86) 4.18 (86) (106) 3.77 3.77 (96) (96)3.77 (96)9.30 9.30 (236)(236)9.30 (236) 2 cable 2 cable entries entries 2 cable entries 4.53 (115) 10.45 (265) 10.45 Mounting (265)Flange Mounting Flange Mounting Flange Probe Insertion Length Ø 2.0 (51) Ø 2.0 (51) Ø 2.0 (51) 3.88 Ø 0.19 (0.5) Probe Probe (99) Insertion Insertion Length Length Model 7y3 Model 7y6 0.75 (19)_ 6.0 6.0 (152)with flanged with flanged (152)Model 7y1 connection connection with flanged connection 3.38 4.18 (86) (106)4.18 (86) (106) 3.77 (96)3.77 (96)9.30 9.30 (236) 6 (152)Ø2 2 cable (51)entries 2 cable entries 5.46 (139)4.70 (119) Mounting Mounting Flange Flange 7x2: SST Weight 5 lbs (2.25 kg) Ø 2.0 (51) order code: 004-8778-001 Ø 2.0 (51) (2) 010-1731-001 Probe Probe Insertion Insertion Length Model 7y2 Model 7y4 Length 6.0 6.0 with flanged with flanged (152) (152)connection connection

₩

MOUNTING CONSIDERATIONS

For Rigid Models 7yF, M, N and Flexible Models 7y1, 2, 4 and 6


1. Turbulence

The bottom of rigid probes should be stabilized if turbulence will cause a deflection of more than 3" (75 mm) at the end of a 10' (3 m) length. The probe should not make contact with metal.


2. Nozzle

Single rod performance in nozzles can be improved by ensuring the following:

- Nozzle must be 2" (50 mm) or larger diameter.
- Nozzle should be as short as possible.
- Nozzle inside diameter (A) should be ≥ to nozzle height (B).
 - If this is not the case, adjustments to BLOCKING DISTANCE and/or SENSITIVITY parameters may be required.

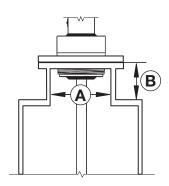

Correct Installation

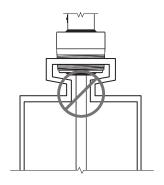

Pipe reducers should not be used

3. Metallic (conductive) obstructions in tank.

Although it depends on the transmitter configuration, objects in the proximity of the probe can cause erroneous readings. Please refer to the table below for guidelines, but please contact the factory with any questions as the distances shown can be reduced with the use of PACT ware.

Distance to probe	Acceptable objects
< 6" (150 mm)	Continuous, smooth, parallel, conductive surface (e.g. metal tank wall); probe should not touch tank wall
> 6" (150 mm)	< 1"/DN25 diameter pipe and beams, ladder rungs
> 12" (300 mm)	< 3"/DN80 diameter pipe and beams, concrete walls
> 18" (450 mm)	All remaining objects

Note: A metal stillwell/cage of max. 6"/DN150 size or a metal tank wall parallel to the probe within 6" (150 mm) will allow the unit to operate accurately in media with dielectrics down to $\mathbf{\epsilon}_{r}$ 1.4.

4. Non-metallic vessels

A metal flange is highly recommended for optimum performance in plastic vessels.

NOTE: Singe rod probes must be used in metallic vessels or stillwell to maintain CE noise immunity.

Shutdown /Overfill protection

Special consideration is necessary in any shutdown/ overfill protection application where single rod GWR probes are used. To ensure proper measurement, use Overfill Capable single rod probes, such as the Model 7yG, L, or J Caged probes in the appropriate cage/ chamber/stillwell.


Mounting Considerations for Single Flexible probes measuring Bulk Solids

The Model 7y2 Bulk Solid probe is designed for a 3000 lb. (1360 kg) pull-down force for use in applications such as sand, plastic pellets, and grains.


- To reduce excessive stresses on the top of the vessel, do not secure the metal probe weight to the bottom of the vessel.
- Mount the probe at least 12 inches from the wall.
 The ideal location is ¼ to ½ the diameter to average the angle of repose.

TWIN FLEXIBLE PROBE DIMENSIONS

INCHES (mm)

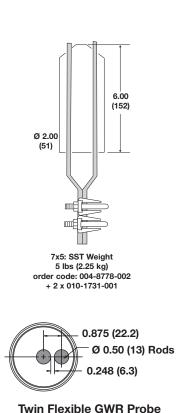

4.18 (86)(106)3.77 (96)9.30 (236) 2 cable entries 5.31 (135) Mounting Flange Probe Insertion Length Model 7y5 with flanged connection

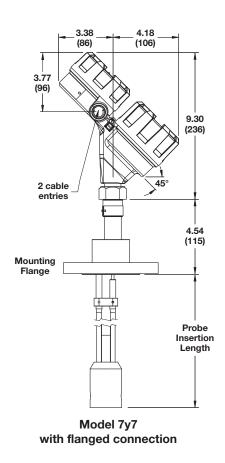

end view

"IN TANK" TWIN FLEXIBLE PROBE

MOUNTING CONSIDERATIONS

For Models 7y7

1. Turbulence

The bottom of Twin Flexible probes can be secured to the bottom of the vessel by using the TFE weight at the bottom of the probe. The TFE weight has a ½" (13 mm) hole that can be utilize to "u-bolt" the probe to the bottom of the vessel.

The probe should not make contact with metal.

2. Nozzle

Twin Flexible probe performance in nozzles can be improved by ensuring the following:

- Nozzle should be 3" (DN80) diameter or larger.
- Nozzle should be as short as possible.

3. Metallic (conductive) obstructions in tank.

Mount the Twin Flexible probe more than 1" (25 mm) from any metallic object/vessel wall.

Mounting Considerations for Twin Flexible Model 7y5 probes measuring Bulk Solids:

The Model 7y5 Bulk Solid probe is designed for a 3000 lb. (1360 kg) pull-down force for use in applications such as sand, plastic pellets, and grains.

- To reduce excessive stresses on the top of the vessel, do not secure the metal probe weight to the bottom of the vessel.
- Mount the probe at least 12 inches from the wall.
 The ideal location is ¼ to ½ the diameter to average the angle of repose.

AURORA® CHAMBER




The Orion Instruments® Aurora® is the patented combination of the ECLIPSE Guided Wave Radar transmitter and a Magnetic Level Indicator (MLI). The integration of these two independent technologies provides excellent redundancy. A custom float positioned within the AURORA chamber travels up and down following level changes. The float contains an internal group of magnets that are "coupled" with magnets in the flags of the visual indicator mounted on the outside of the chamber. As the float moves, the flags rotate to expose the color of their opposite side. The position where the flag's color changes corresponds to a point on the measuring scale indicating true level. In addition to this external visual indicator operated by the AURORA internal float, the ECLIPSE Model 706 transmitter reflects electromagnetic radar pulses directly off the liquid surface providing a real-time continuous level output.

Refer to Orion Instruments® Sales Bulletin ORI-138 for details and additional options on AURORA chambers.

Regardless of whether a standard chamber or AURORA chamber is being used it is important to remember:

- Ensure that the Model 706 probe extends at least 4" (100 mm) past the lower process connection of the chamber
- Utilize Overfill-capable probes for optimal GWR performance.

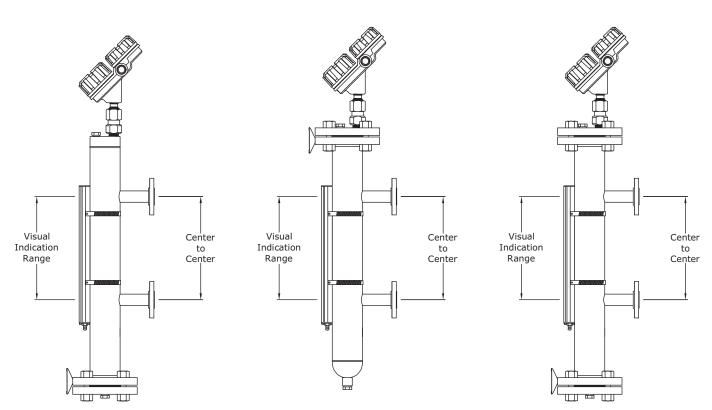



The quality assurance system in place at MAGNETROL guarantees the highest level of quality throughout the company.

MAGNETROL is committed to providing full customer satisfaction both in quality products and quality service.

The MAGNETROL quality assurance system is registered to ISO 9001 affirming its commitment to known international quality standards providing the strongest assurance of product/service quality available.

ESP

Expedite Ship Plan

Several Models of ECLIPSE Guided Wave Radar Transmitters are available for quick shipment, usually within one week after factory receipt of a complete purchase order, through the Expedite Ship Plan (ESP). Models covered by ESP service are color

Models covered by ESP service are color coded in the selection data charts.

To take advantage of ESP, simply match the color coded model number codes (standard dimensions apply).

ESP service may not apply to orders of ten units or more. Contact your local representative for lead times on larger volume orders, as well as other products and options.

WARRANTY



All MAGNETROL electronic level and flow controls are warranted free of defects in materials or workmanship for one full year from the date of original factory shipment.

If returned within the warranty period; and, upon factory inspection of the control, the cause of the claim is determined to be covered under the warranty; then, MAGNETROL will repair or replace the control at no cost

to the purchaser (or owner) other than transportation.

MAGNETROL shall not be liable for misapplication, labor claims, direct or consequential damage or expense arising from the installation or use of equipment. There are no other warranties expressed or implied, except special written warranties covering some MAGNETROL products.

For additional information, see Instruction Manual 57-606.

ECLIPSE Guided Wave Radar transmitters may be protected by one or more of the following U.S. Patent Nos. US 6,062,095: US 6,247,362; US 6,588,272; US 6,626,038; US 6,640,629; US 6,642,807; US 6,690,320; US 6,750,808; US 6,801,157;

US 6,867,729; US 6,879,282; 6,906,662. May depend on model. Other patents pending.



705 Enterprise Street • Aurora, Illinois 60504-8149 • 630-969-4000 • Fax 630-969-9489 info@magnetrol.com • www.magnetrol.com

Copyright © 2013 Magnetrol International, Incorporated. All rights reserved. Printed in the USA. Performance specifications are effective with date of issue and are subject to change without notice.

Magnetrol & Magnetrol logotype, Orion Instruments & Orion Instruments logotype, ECLIPSE and MODULEVEL are registered trademarks of Magnetrol International, Incorporated.

CSA logotype is a registered trademark of Canadian Standards Association. Eckardt is a registered trademark of Invensys Process Systems. Fisher is a registered trademark of Emerson Process Management. FOUNDATION fieldbus logo is a registered trademark of the Fieldbus Foundation. HART is a registered trademark of the HART Communication Foundation. Hastelloy is a registered trademark of Haynes International, Inc. Masoneilan is a registered trademark of Dresser Industries, Inc. Monel is a registered trademark of International Nickel Co. PACTware is trademark of PACTware is trademark of PACTware is trademark of PACTware is trademark of Tokyo Keiso Co., Ltd. Viton and Kalrez are registered trademarks of DuPont Performance Elastomers

BULLETIN: 57-106.4 EFFECTIVE: June 2013 SUPERCEDES: May 2013